

# AURES Bluetooth Scanner Configuration


## 1 Reset




## 2 Bluetooth HID



## 3 Standard Configuration

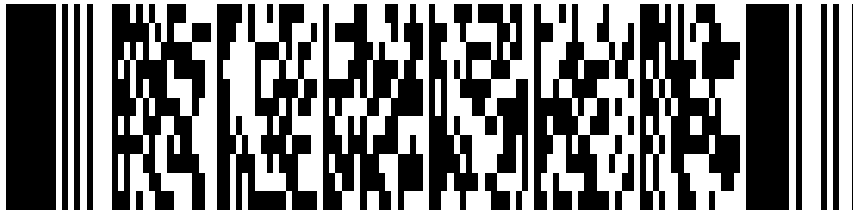

## Inventory Mode

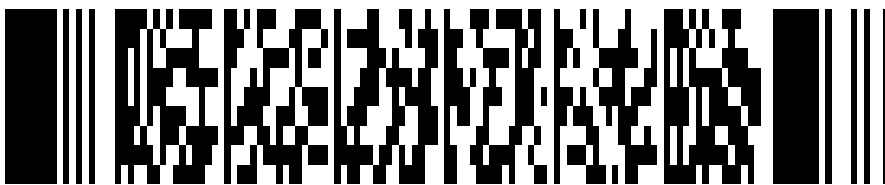

To go in inventory mode you have to disconnect the scanner from the bluetooth to active the internal storage.

\*To disconnect the scanner push the bottom button for 3 seconds

When the scanner is disconnected barcode scanned are saved in the internal memory

\*To reconnect the scanner push the top button for 3 seconds.

When the scanner is connected it will send all the data