

# User Manual

---

January 2011 Revision 2.0



Galéo 200  
Point - of - Sale  
Hardware System



Copyright 2011  
All Rights Reserved  
Manual Version 2.0

The information contained in this document is subject to change without notice. We make no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. We shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without the prior written consent of the manufacturer.

**TRADEMARK**

Intel®, Pentium® and MMX are registered trademarks of Intel® Corporation. Microsoft® and Windows® are registered trademarks of Microsoft Corporation.

# Safety

## IMPORTANT SAFETY INSTRUCTIONS

1. To disconnect the machine from the electrical power supply, turn off the power switch and remove the power cord plug from the wall socket. The wall socket must be easily accessible and in close proximity to the machine.
2. Read these instructions carefully. Save these instructions for future reference.
3. Follow all warnings and instructions marked on the product.
4. Do not use this product near water.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
7. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.
9. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

## CE MARK



This device complies with the requirements of the EEC directive 2004/108/EC with regard to "Electromagnetic compatibility" and 2006/95/EC "Low Voltage Directive".

## FCC

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## CAUTION ON LITHIUM BATTERIES

There is a danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.



### Battery Caution

Risk of explosion if battery is replaced by an incorrectly type. Dispose of used battery according to the local disposal instructions.



### Safety Caution

Note: To comply with IEC60950-1 Clause 2.5 (limited power sources, L.P.S) related legislation, peripherals shall be 4.7.3.2 "Materials for fire enclosure" compliant.


#### 4.7.3.2 Materials for fire enclosures

For MOVABLE EQUIPMENT having a total mass not exceeding 18kg.the material of a FIRE ENCLOSURE, in the thinnest significant wall thickness used, shall be of V-1 CLASS MATERIAL or shall pass the test of Clause A.2.

For MOVABLE EQUIPMENT having a total mass exceeding 18kg and for all STATIONAR EQUIPMENT, the material of a FIRE ENCLOSURE, in the thinnest significant wall thickness used, shall be of 5VB CLASS MATERIAL or shall pass the test of Clause A.1

## LEGISLATION AND WEEE SYMBOL

**2002/96/EC Waste Electrical and Electronic Equipment Directive on the treatment, collection, recycling and disposal of electric and electronic devices and their components.**

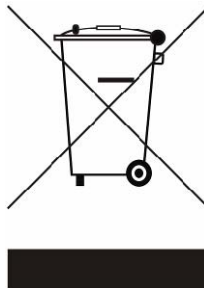

The crossed dustbin symbol on the device means that it should not be disposed of with other household wastes at the end of its working life. Instead, the device should be taken to the waste collection centers for activation of the treatment, collection, recycling and disposal procedure.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product should not be mixed with other commercial wastes for disposal.

# Revision History

---

Revision Number	Description	Revision Date
1.0	Initial release	2007 December
1.1	Chapter 7.2.3 default setting correction	2008 January
1.2	<ul style="list-style-type: none"> <li>• Drivers of B78 M/B updated from v1.0 to v2.2 (page 11~21)</li> <li>• M/B Layout of B78 M/B updated to v2.2. (page 36)</li> <li>• Jumper settings updated from v1.0 to v2.2 (page 37~42)</li> <li>• MB photos updated to v2.2.</li> <li>• I/O Port change line-in / line-out to MIC-in / line-out</li> <li>• HDD Connector changed from IDE to SATA.</li> <li>• Updated specification</li> <li>• Updated optional items</li> </ul>	2009 April
1.3	Update for new VFD module: <ul style="list-style-type: none"> <li>• configuration by software (no dip-switches)</li> <li>• non volatile EEPROM to store configuration</li> <li>• supports user defined character set</li> <li>• software utilities to configure VFD, define character set and update firmware</li> <li>• Added dimensional drawings</li> </ul>	2010 March
2.0	<ul style="list-style-type: none"> <li>• Model name change</li> <li>• Remove CD driver bank</li> <li>• Updated driver installation</li> <li>• MB updated from B78 v2.2 to C48 v2.1</li> <li>• Jumper settings updated from B78 v2.2 to C48 v2.1</li> <li>• BIOS settings updated from B78 v2.2 to C48 v2.1</li> <li>• Updated customer display command settings</li> </ul>	January 2011

# Table of Contents

---

<b>1. Item Checklist</b> .....	<b>8</b>
1.1. Standard Items.....	8
1.2. Optional Items.....	9
<b>2. System View</b> .....	<b>10</b>
2.1. Front View.....	10
2.2. Back View .....	10
2.3. Side View.....	11
2.4. I/O View .....	11
<b>3. Driver Installation</b> .....	<b>12</b>
3.1 Driver Download .....	12
3.2 Driver List .....	12
<b>4. Peripherals Installation</b> .....	<b>13</b>
4.1. Accessing to the I/O.....	13
4.2. MSR Installation.....	14
4.3. Cash Drawer Installation.....	15
<b>5. System Disassembly</b> .....	<b>17</b>
5.1. Replacing the HDD .....	17
5.2. Replacing the Slim VFD.....	18
5.3. Replacing the Mainboard.....	19
5.4. To Separate the Panel from the Stand .....	21
5.5. Replacing Inverter Board, Touch Screen Board & MSR Board .....	22
<b>6. Specification</b> .....	<b>24</b>
<b>7. Jumper Settings</b> .....	<b>26</b>
7.1. Connectors .....	28
7.2. Jumper Setting.....	29
<b>8. BIOS Settings</b> .....	<b>36</b>
<b>9. Dimensions</b> .....	<b>40</b>
<b>10. Customer Display Command Settings</b> .....	<b>42</b>

# 1. Item Checklist

---

Take the system unit out of the carton. Remove the unit from the carton by holding it by the foam inserts. The following contents should be found in the carton:

## 1.1. Standard Items



a. System



b. Power Cable



c. Power adapter



d. COM port cables (4)



## 1.2. Optional Items



a. Magnetic Card reader



b. iButton Dallas reader



c. Magnetic Card +  
iButton Dallas reader



d. RFID reader



e. Magnetic Card Reader +  
Biometric Reader (fingerprint)

## 2. System View

---

### 2.1. Front View




### 2.2. Back View



### 2.3. Side View



### 2.4. I/O View

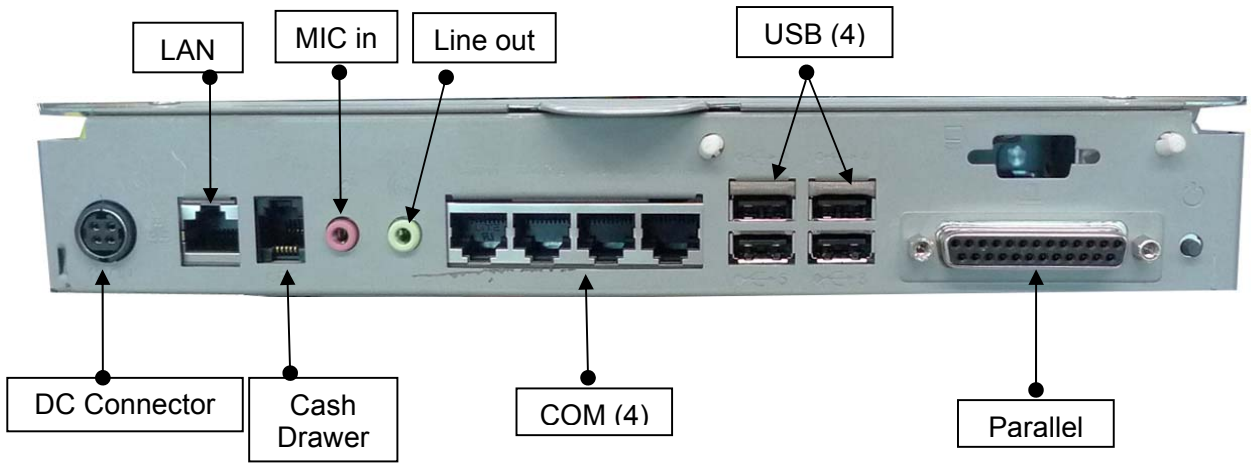

**Note:** The maximum current that can be drawn from each COM port is 500 mA.

## 3. Driver Installation

---

### 3.1 Driver Download

To download the most recent drivers and utilities, and obtain advice regarding the installation of your equipment, please visit the AURES Technical Support Website:

[www.ares-support.fr](http://www.ares-support.fr) (French)

[www.ares-support.fr/UK](http://www.ares-support.fr/UK) (English)

[www.ares-support.fr/GE](http://www.ares-support.fr/GE) (German)

### 3.2 Driver List

Folder/File	File Description
<CD>:\Galeo\Galeo.htm	Galeo Driver List
<CD>:\Common\Intel\Chipset\i9xx	Chipset Driver
<CD>:\Common\Intel\USB20	USB 2.0 Driver
<CD>:\Common\Intel\VGA\GMA3150	VGA Driver
<CD>:\Common\ELO_Touch	ELO Touch Driver
<CD>:\Common\Audio\Realtek_HD_Codec	Audio Driver
<CD>:\Common\Lan_driver\Realtek_PCl	10/100/1000MB LAN Driver
<CD>:\Common\USB2COM\PL-2303HX	USB-VFD PL2303 Driver

Detailed driver installation instructions are included on the driver CD.


## 4. Peripherals Installation

---

### 4.1. Accessing to the I/O



a. Loosen the thumb screws (2) to remove the front side stand cover.

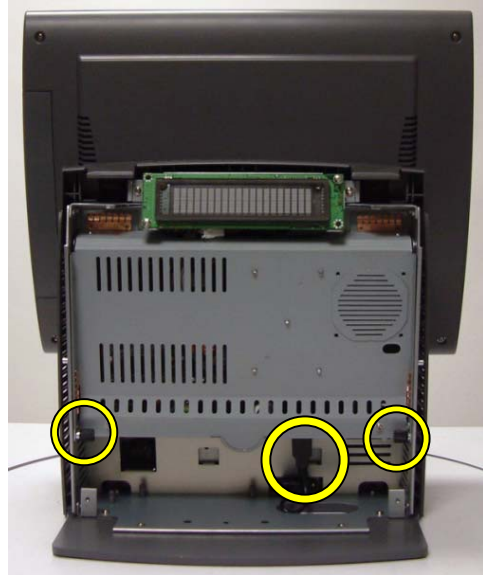

b. Loosen the thumb screws (2) and disconnect the cable to release Main board module.




c. Lift the Main board module up to access to the I/O

## 4.2. MSR Installation


The MSR unit is tested and can be supplied at your request. This MSR is removed during transportation and can be connected by the user.



a. Remove the screws (2) to release the MSR dummy door from the system.

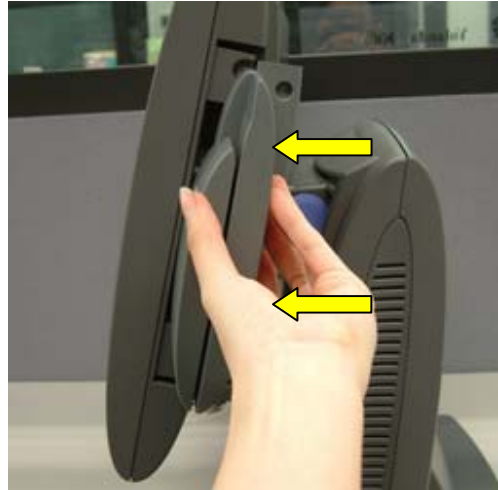

b. Slide the MSR into the position

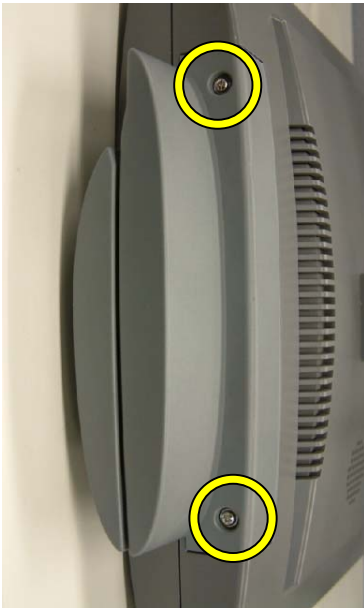


c. Fasten it to the display housing by tightening the screws (2).

### 4.3. Cash Drawer Installation

You can install a cash drawer through the cash drawer port. Please verify the pin assignment before installation.

Cash Drawer Pin Assignment

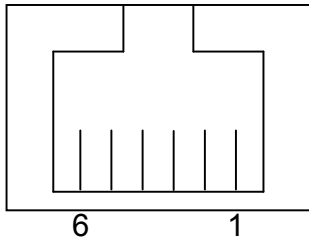


Pin	Signal
1	GND
2	DOUT bit0
3	DIN bit0
4	12V / 19V
5	DOUT bit1
6	GND

#### Cash Drawer Controller Register

The Cash Drawer Controller use one I/O addresses to control the Cash Drawer.

**Register Location:** 48Ch  
**Attribute:** Read / Write  
**Size:** 8bit

BIT	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
Attribute	Reserved	Read	Reserved	Reserved	Write	Reserved	Reserved	Reserved

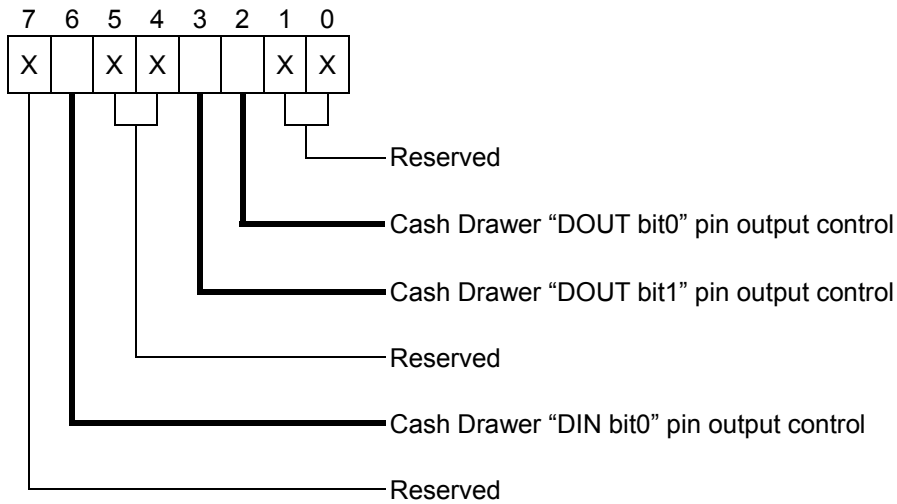

Bit 7: Reserved

Bit 6: Cash Drawer "DIN bit0" pin input status.

= 1: the Cash Drawer closed or no Cash Drawer

= 0: the Cash Drawer opened

Bit 5: Reserved

Bit 4: Reserved

Bit 3: Cash Drawer "DOUT bit1" pin output control.

= 1: Opening the Cash Drawer

= 0: Allow close the Cash Drawer

Bit 2: Cash Drawer "DOUT bit0" pin output control.

= 1: Opening the Cash Drawer

= 0: Allow close the Cash Drawer

Bit 1: Reserved

Bit 0: Reserved

Note: Please follow the Cash Drawer control signal design to control the Cash Drawer.

### Cash Drawer Control Command Example

Use Debug.EXE program under DOS or Windows98

Command	Cash Drawer
O 48C 04	Opening
O 48C 00	Allow to close
➤ Set the I/O address 48Ch bit2 =1 for opening Cash Drawer by "DOUT bit0" pin control.	
➤ Set the I/O address 48Ch bit2 = 0 for allow close Cash Drawer.	

Command	Cash Drawer
I 48C	Check status
➤ The I/O address 48Ch bit6 =1 mean the Cash Drawer is opened or not exist.	
➤ The I/O address 48Ch bit6 =0 mean the Cash Drawer is closed.	



# 5. System Disassembly


## 5.1. Replacing the HDD




a. Loosen the thumb screws (2) to remove the front side stand cover.



b. Disconnect the SATA cable (1) and loose the screw (1) to loose the HDD bracket from the system.

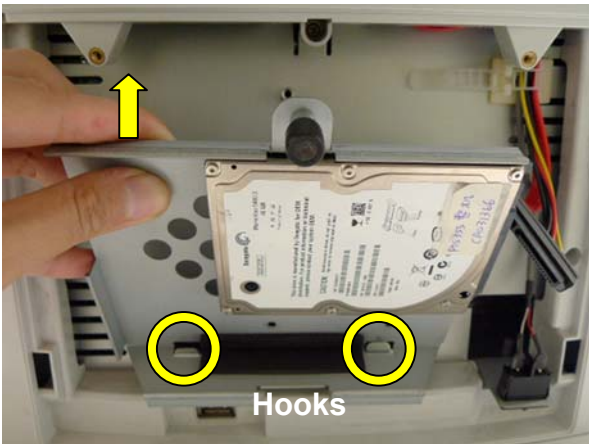

c. Separate the HDD bracket as upward direction from the hooks as circles marked on the system.

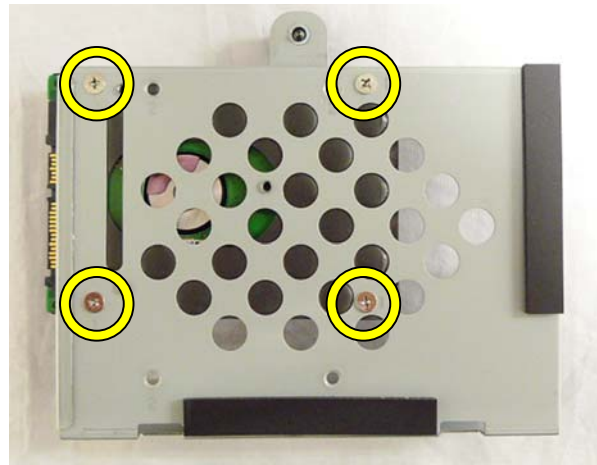


d. Turn the rear of HDD bracket front and remove the screws (4) to unfasten the HDD from the HDD bracket.


## 5.2. Replacing the Slim VFD



a. Loosen the thumb screws (2) to remove the stand back cover.

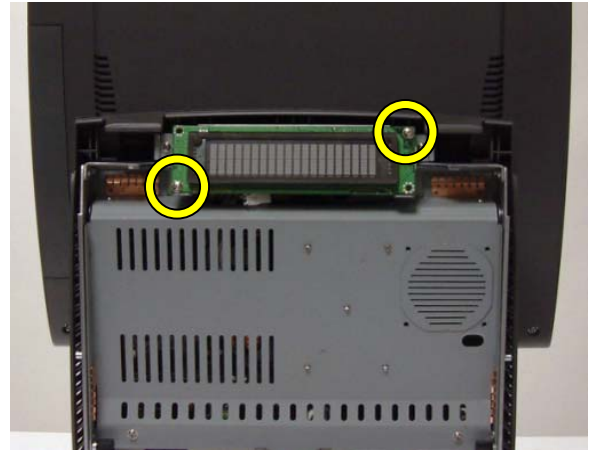


b. Remove the screws (2) to release the VFD from the system

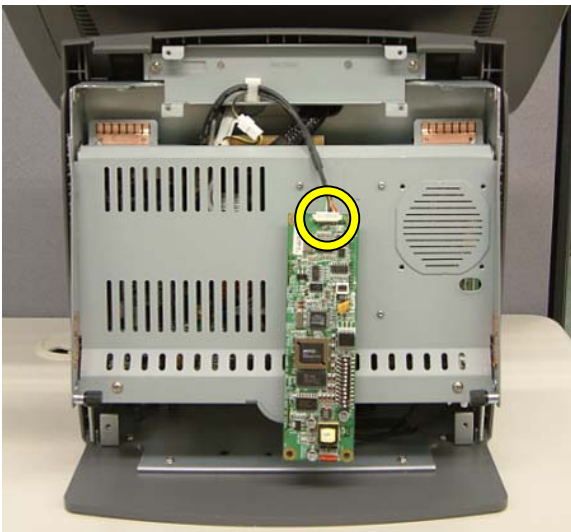


c. Disconnect the cable to replace the VFD

### 5.3. Replacing the Mainboard


Remove the stand back cover as described in chapter 5.2 (a)

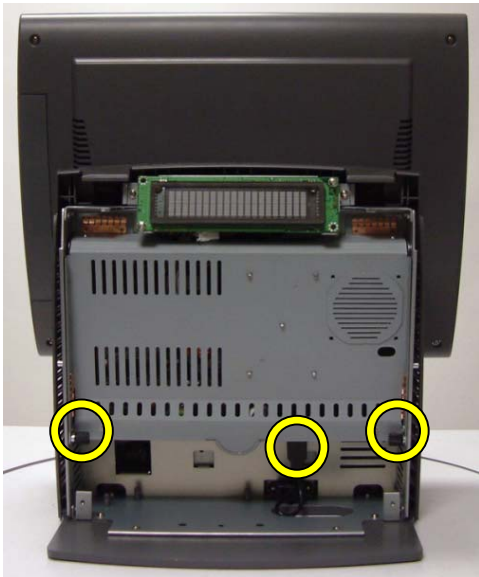


a. Loosen the thumb screws (2) and disconnect the USB cable (1)

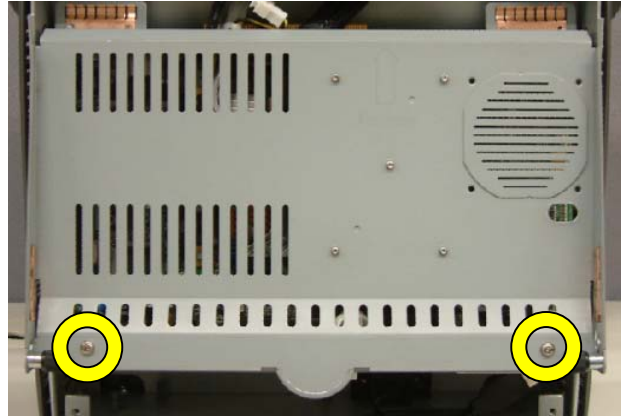

b. Remove the screws (2)

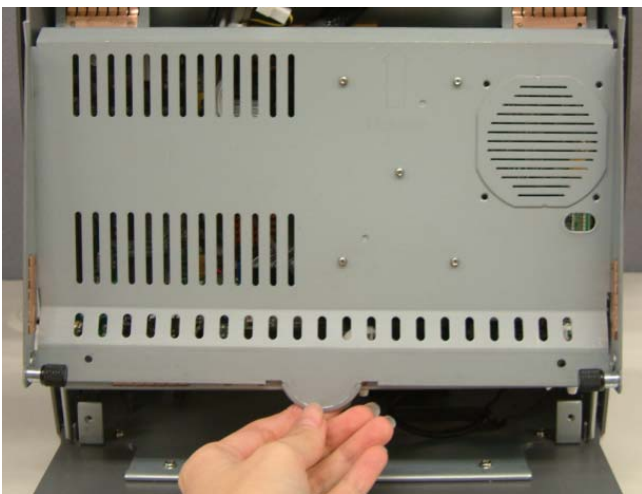


c. Remove the metal cover to access the Mainboard.

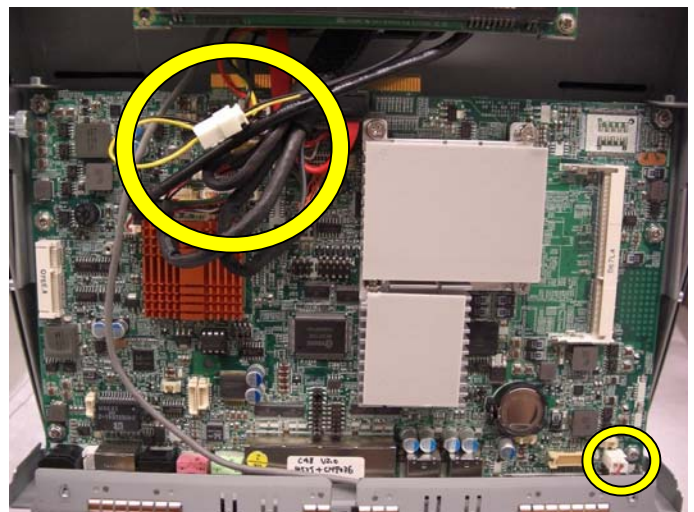


d. Disconnect all the cables (9)




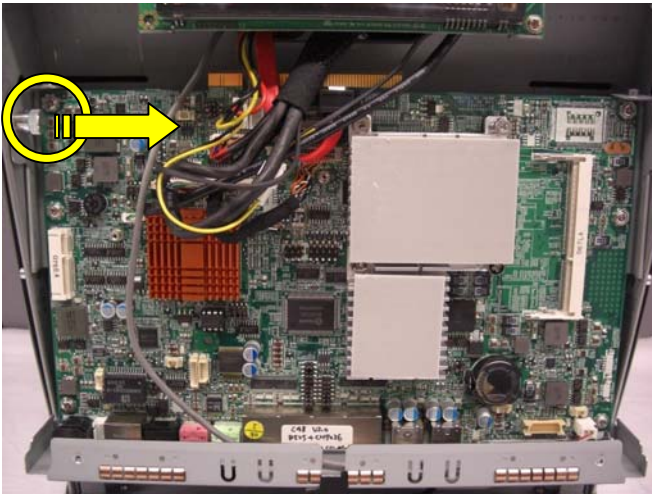

e. Pull the thumbscrew (1) in the direction as shown by the arrow to release the main board tray from the system

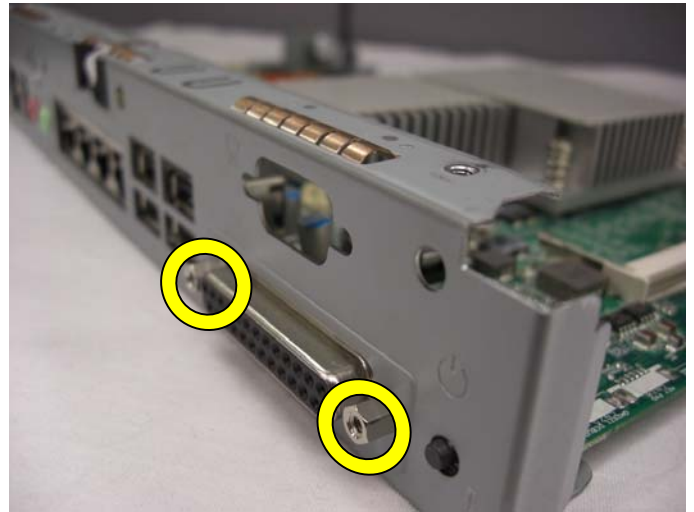


f. Remove the hex screws (2)

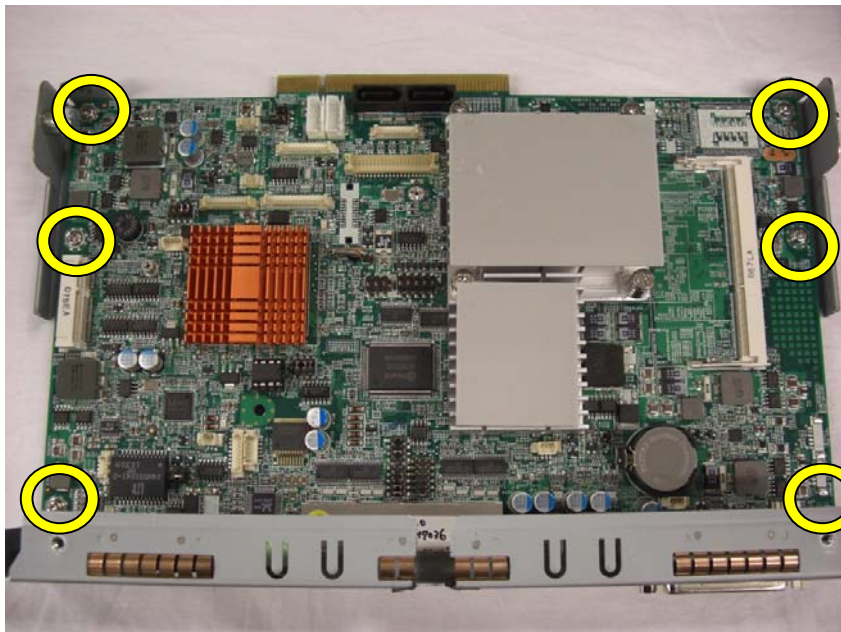


g. Remove the screws (6) to replace the main board from the tray

#### 5.4. To Separate the Panel from the Stand


Please first follow the steps in chapter 5.2 (a), 5.3(a)(b)(c)

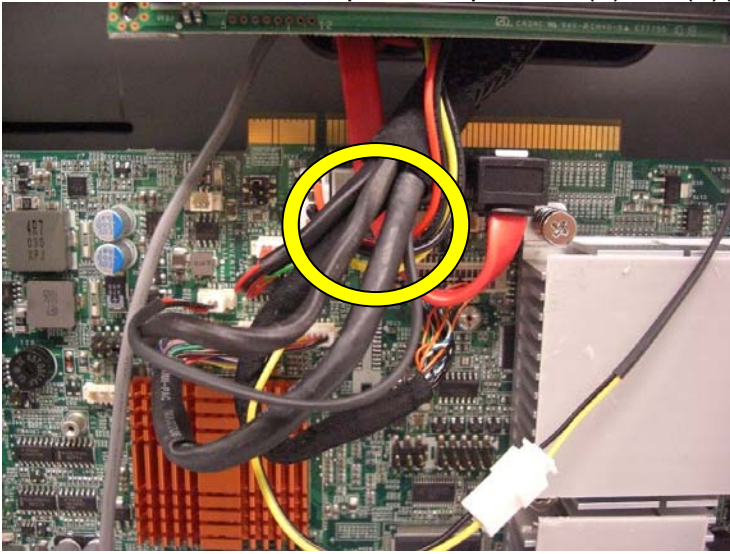


a. Disconnect the cables (5)

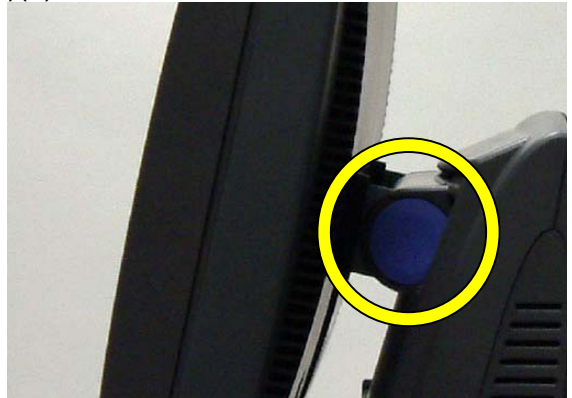

b. Remove the hinge covers(2) one from each side

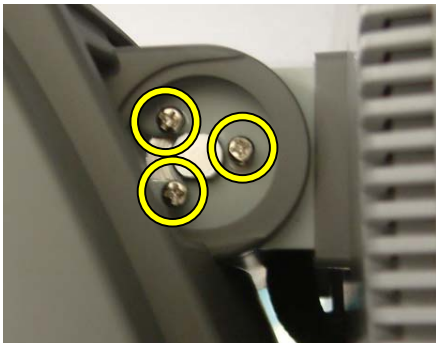


c. Remove the screws(6), 3 from each side to separate the display from the stand

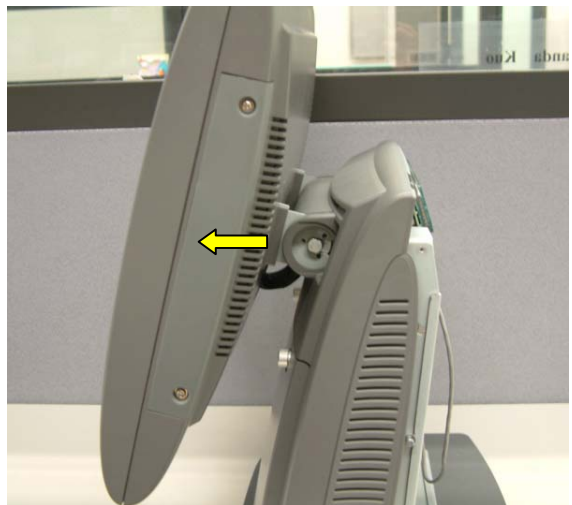


d. Separate the panel from the stand

## 5.5. Replacing Inverter Board, Touch Screen Board & MSR Board


Please first follow the steps in chapter 5.2 (a), 5.3(a)(b)(c), 5.4

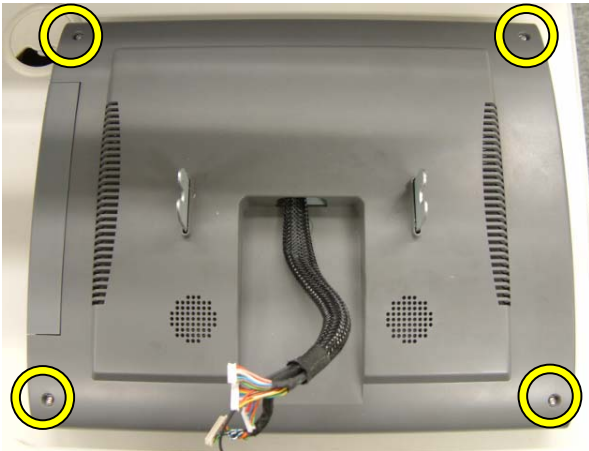


a. Remove the screws (4)

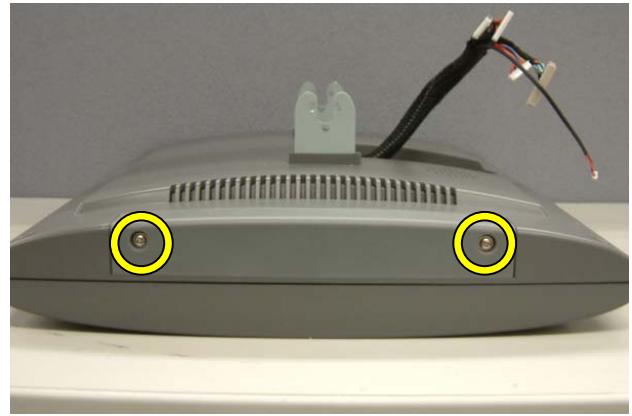

b. Remove the screws(2) to remove the MSR cover

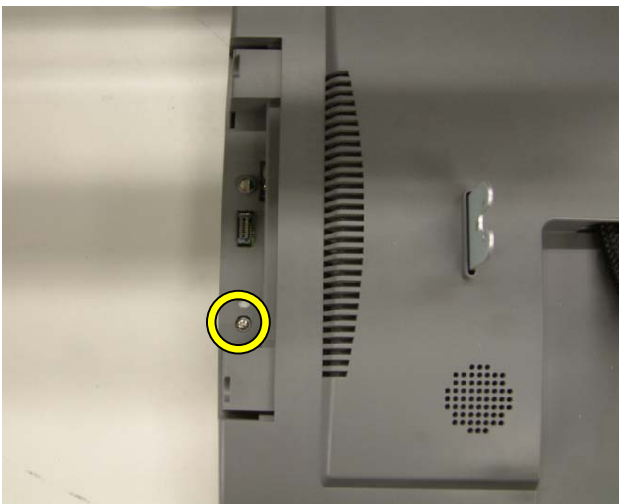


c. Remove the screws(1) then remove the display cover from the panel

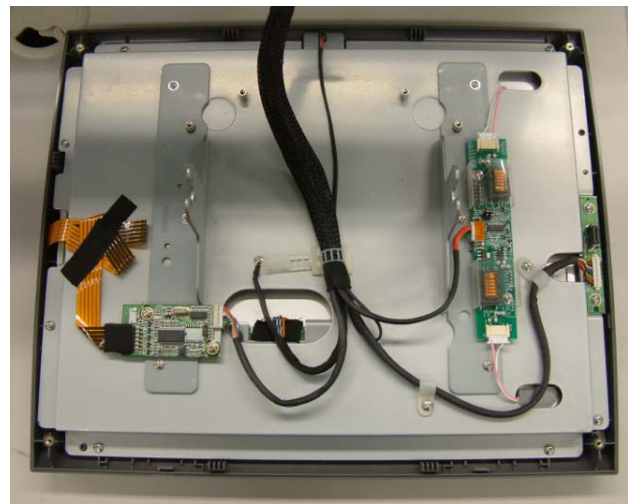

d. Now you can access to the Inverter board, touch board, and the MSR board




To replace the Inverter Board

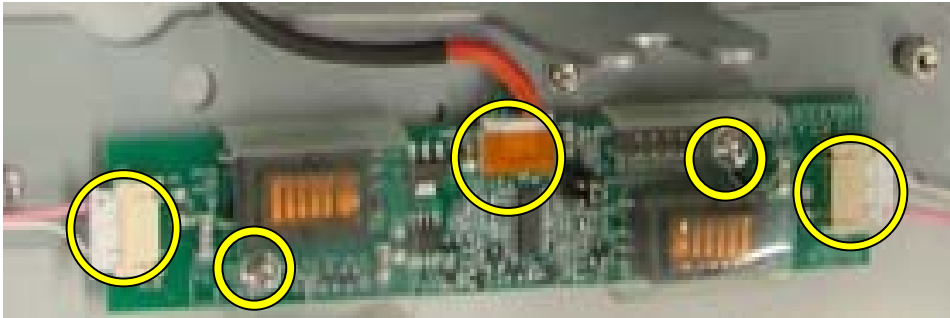


Remove the screws (2) and disconnect the cables (3).

To replace the Touch Board

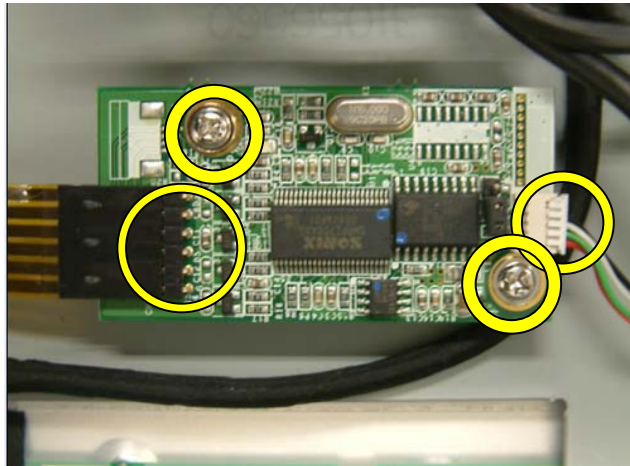

Remove the screws (2) and disconnect the cables(2).

To replace the MSR Board

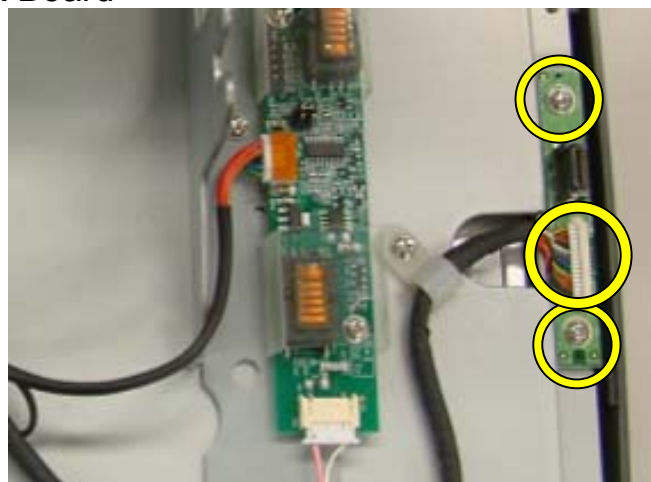

Remove the screws (2) and disconnect the cable (1)

## 6. Specification


<b>Model Name</b>	<b>Galéo 200 Point-of-Sale Hardware System</b>
<b>Motherboard</b>	<b>C48</b>
CPU Support	Intel Pineview D525 dual core 1.8G L2 1M, FSB800MHz
Core Logic	CPU with Graphic built-in + ICH 8M
System Memory	2 x DDR3 DIMM up to 4GB, FSB 800MHz
Graphic Memory	Intel GMA 3150 share system memory up to 256MB
BIOS	AMI
<b>LCD Panel</b>	
LCD Size	15" TFT
Brightness	250 cd / m <sup>2</sup>
Maximal Resolution	1024 x 768
Touch Screen Type	Resistive
Tilt Angle	-25° ~ 65°
<b>Storage</b>	
HDD	slim HDD bay x1 (SATA interface )
Flash Memory	optional compact flash board
<b>Expansion</b>	
Mini-PCI Socket	1
<b>I/O</b>	
<b>Front I/O</b>	
USB	1(V2.0)
Power Switch	1
<b>Base Rear I / O</b>	
USB	4 (V2.0) (one USB occupied by front USB connector)
Serial/COM	4 x RJ 45 COM (COM1/COM2 standard RS-232 without power, COM3 /COM4 powered COM with power enable /disable by BIOS setting and +5V/+12V by MB setting. COM3 default +5V/ COM4 default +12V )
Parallel	1 x D-sub 25-pin connector
LAN (10/100/1000)	1 x RJ45
Cash Drawer	12V /24V
Microphone-in	1
Line-out	1
<b>Control/Indicator</b>	
Power Button	1
Indicator LED	1 x power LED
<b>Power</b>	
Power Adapter	90W




<b>Peripherals</b>	
Customer Display	slim type VFD (USB/COM7 interface)
Magnetic Card Reader	3 Track (keyboard or RS232 interface)
iButton Dallas Reader	Keyboard and RS232 interface
Magnetic Card + iButton Dallas Reader	Keyboard interface (Magnetic Card reader) Keyboard and RS232 interface (iButton Dallas reader)
RFID Reader	USB interface
Biometric Reader (fingerprint) + Magnetic Card Reader	USB interface (Biometric reader) PS/2 interface (Magnetic Card Reader)
<b>Environment</b>	
Operating Temperature	5°C ~ 35°C ( 41°F ~ 95°F )
Storage Temperature	-20°C ~ 55°C (-4°F ~ 140°F)
Operating Humidity	20% - 80% RH non condensing
Storage Humidity	20% - 85% RH non condensing
<b>OS Support</b>	Windows XP, WEPOS, XP Embedded, XP Professional for Embedded, WIN 2000/NT 4.0

# 7. Jumper Settings

## C48 V2.1 Motherboard

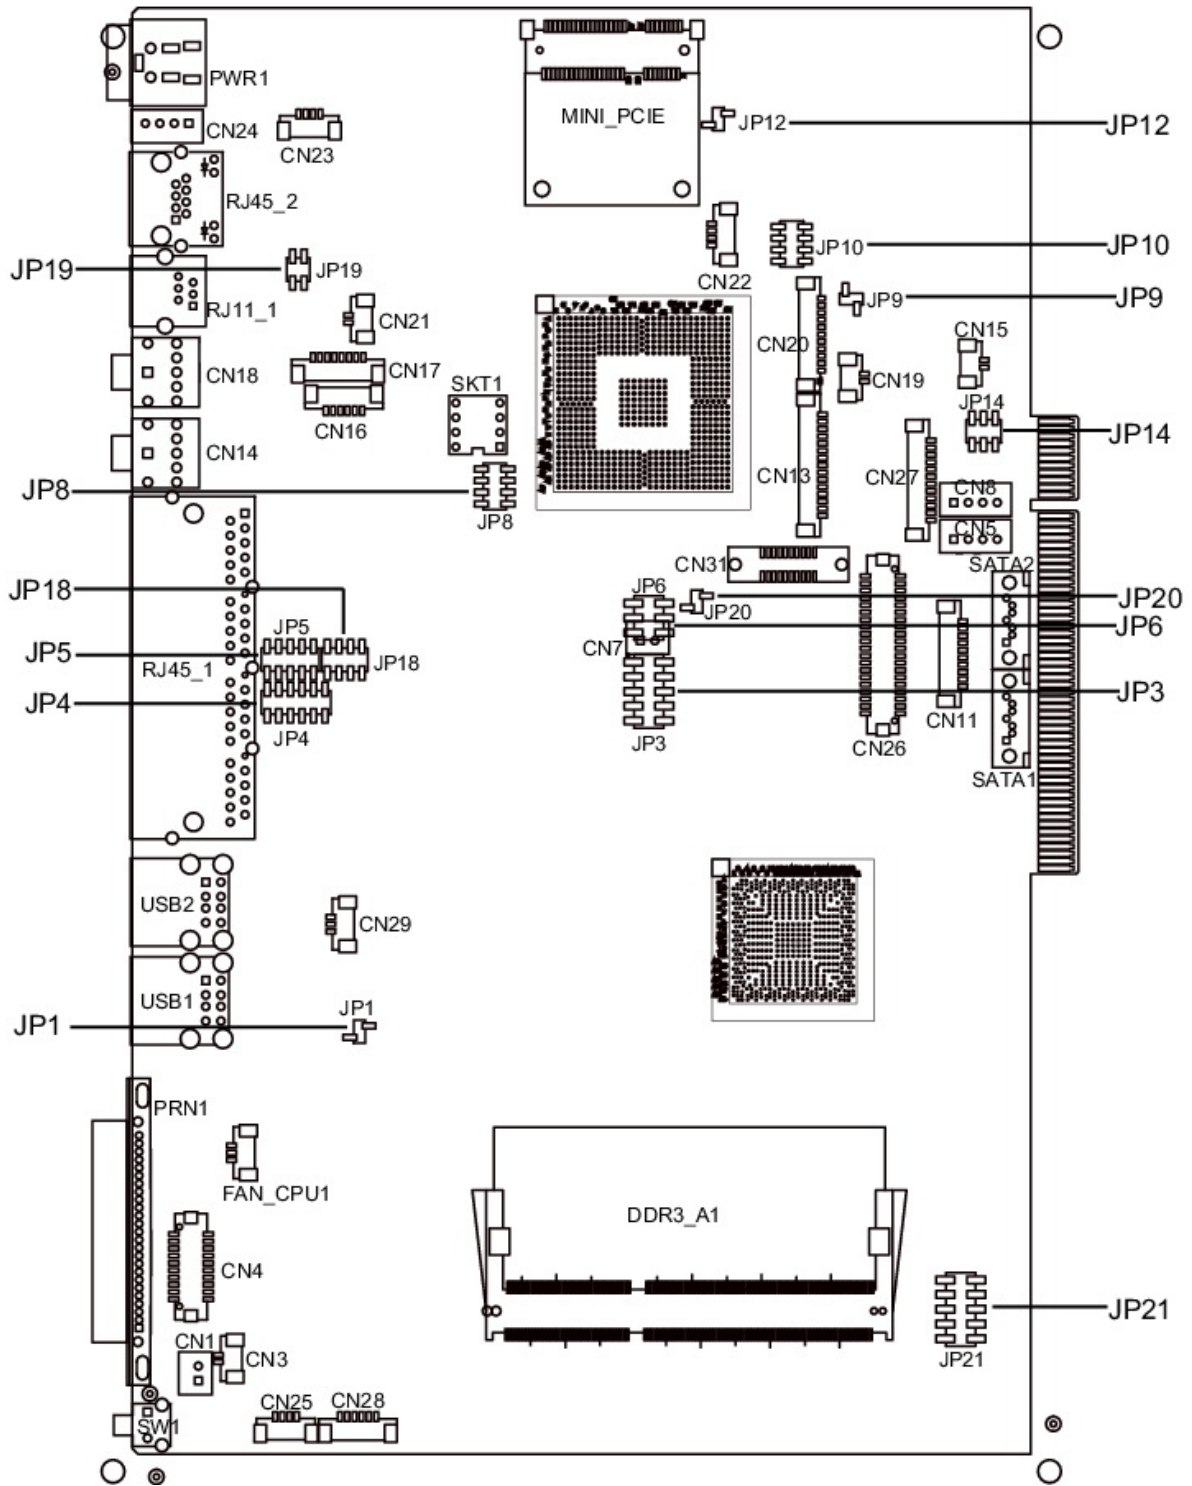

C48 V2.1 TOP LAYER

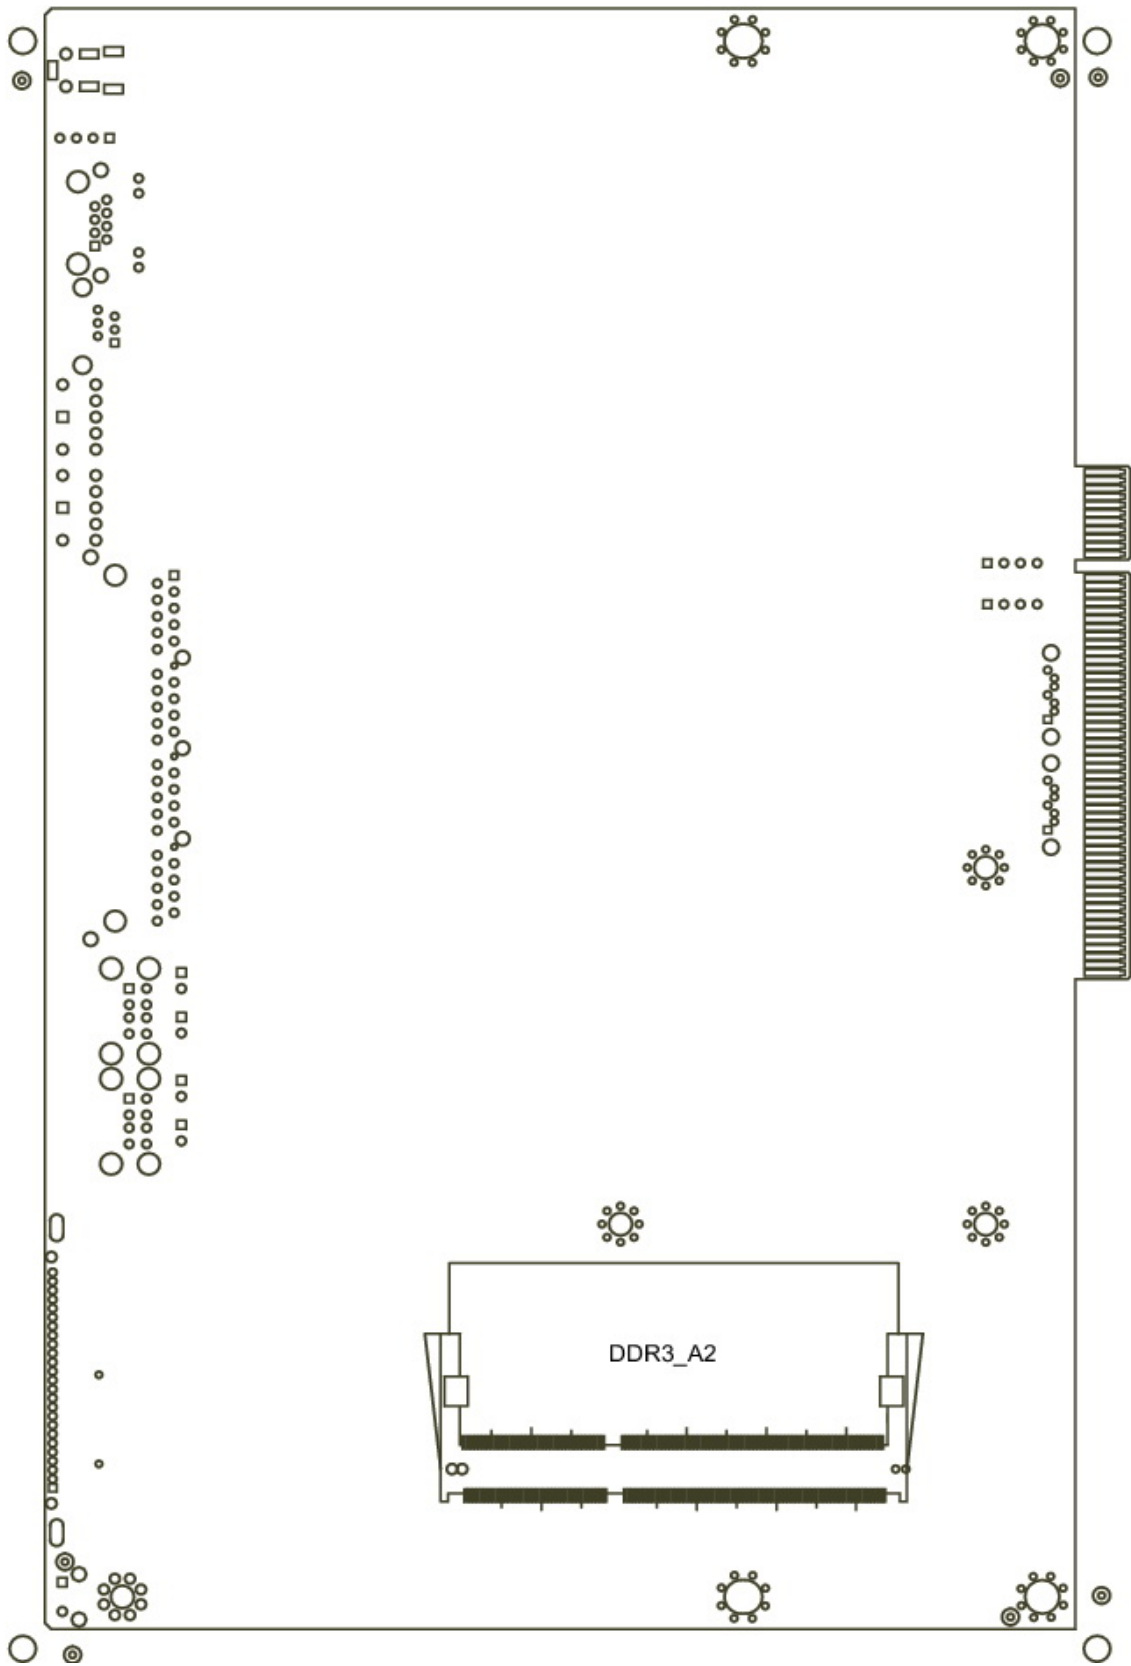

C48 V2.1 BOTTOM LAYER

## 7.1. Connectors

Connector	Purpose
CN1	Power Button Connector
CN3	Printer Port Reset
CN4	Printer Port
CN5/8	HDD Power
CN11	COM5 For Touch
CN13	Card Reader Connector
CN14	Line out
CN15	HDD LED
CN16	Speaker & MIC
CN18	MIC IN
CN20/JP10	System Indicator
CN22	USB Port
CN23	PS2 KEYBOARD
CN26	LVDS
CN27	Inverter Connector
CN29	System Fan
DDR3_A1	DDR3 SO-DIMM1
DDR3_A2	DDR3 SO-DIMM2
PRN1	Parallel Port
PWR1	+19V DC Jack
RJ11_1	Cash Drawer Connector
RJ45_1	COM1, COM2, COM3, COM4
RJ45_2	LAN
SATA1	SATA Connector
SATA2	SATA Connector
USB1	USB1, USB2
USB2	USB3, USB4
SW1	Power Button
JP1	CMOS Operation Mode
JP3/6	VGA Port
JP4/5	COM2 RS232/485/422 Setting
JP8	LCD ID Setting
JP9	Power Mode Setting
JP12	System Reset
JP14	Inverter Selection
JP18	COM3/4 Power Setting
JP19	Cash Drawer Power Setting

## 7.2. Jumper Setting

### COM/2 RS232/485/422 Setting

Function	JP5	JP4	Location																																	
▲RS232	<table border="1"> <tr><td>1</td><td>3</td><td>5</td><td>7</td><td>9</td></tr> <tr><td>■</td><td>■</td><td>■</td><td>■</td><td>□</td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td><td>10</td></tr> </table>	1	3	5	7	9	■	■	■	■	□	2	4	6	8	10	<table border="1"> <tr><td>1</td><td>3</td><td>5</td><td>7</td><td>9</td><td>11</td></tr> <tr><td>■</td><td>□</td><td>□</td><td>□</td><td>□</td><td>□</td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td><td>10</td><td>12</td></tr> </table>	1	3	5	7	9	11	■	□	□	□	□	□	2	4	6	8	10	12	
1	3	5	7	9																																
■	■	■	■	□																																
2	4	6	8	10																																
1	3	5	7	9	11																															
■	□	□	□	□	□																															
2	4	6	8	10	12																															
RS485	<table border="1"> <tr><td>1</td><td>3</td><td>5</td><td>7</td><td>9</td></tr> <tr><td>□</td><td>□</td><td>□</td><td>■</td><td>□</td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td><td>10</td></tr> </table>	1	3	5	7	9	□	□	□	■	□	2	4	6	8	10	<table border="1"> <tr><td>1</td><td>3</td><td>5</td><td>7</td><td>9</td><td>11</td></tr> <tr><td>□</td><td>■</td><td>□</td><td>□</td><td>□</td><td>□</td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td><td>10</td><td>12</td></tr> </table>	1	3	5	7	9	11	□	■	□	□	□	□	2	4	6	8	10	12	
1	3	5	7	9																																
□	□	□	■	□																																
2	4	6	8	10																																
1	3	5	7	9	11																															
□	■	□	□	□	□																															
2	4	6	8	10	12																															
RS422	<table border="1"> <tr><td>1</td><td>3</td><td>5</td><td>7</td><td>9</td></tr> <tr><td>□</td><td>□</td><td>□</td><td>□</td><td>■</td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td><td>10</td></tr> </table>	1	3	5	7	9	□	□	□	□	■	2	4	6	8	10	<table border="1"> <tr><td>1</td><td>3</td><td>5</td><td>7</td><td>9</td><td>11</td></tr> <tr><td>□</td><td>□</td><td>■</td><td>■</td><td>■</td><td>■</td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td><td>10</td><td>12</td></tr> </table>	1	3	5	7	9	11	□	□	■	■	■	■	2	4	6	8	10	12	
1	3	5	7	9																																
□	□	□	□	■																																
2	4	6	8	10																																
1	3	5	7	9	11																															
□	□	■	■	■	■																															
2	4	6	8	10	12																															

### COM3 & COM4 Power Setting

COM3 and COM4 can be set to provide power to your serial device.

The voltage can be set to +5V (default) or 12V by setting jumper JP18 on the motherboard.


When enabled, the power is available on pin 10 of the RJ45 serial connector..

If you use the serial RJ45 to DB9 adapter cable, the power is on pin 9 of the DB9 connector.


By default, the power option is **disabled** in the BIOS.

#### Enable COM3/COM4 power in BIOS

1. Power on the system, and press the <DEL> key when the system is booting up to enter the BIOS Setup utility.
2. Select the Advanced tab
3. Select **Power Configuration COM/VGA Ports** and press <Enter> to go to display the available options.

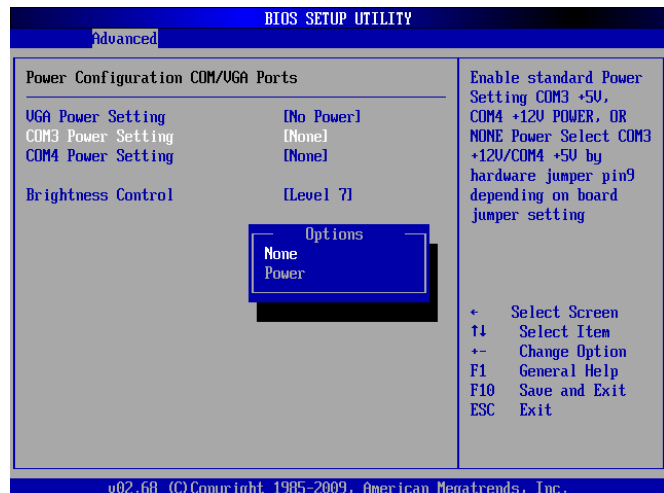

- To enable the power, select **COM3 Power Setting** or **COM4 Power Setting** and press <Enter>. Select **Power** and press <Enter>. Save the change by pressing F10.

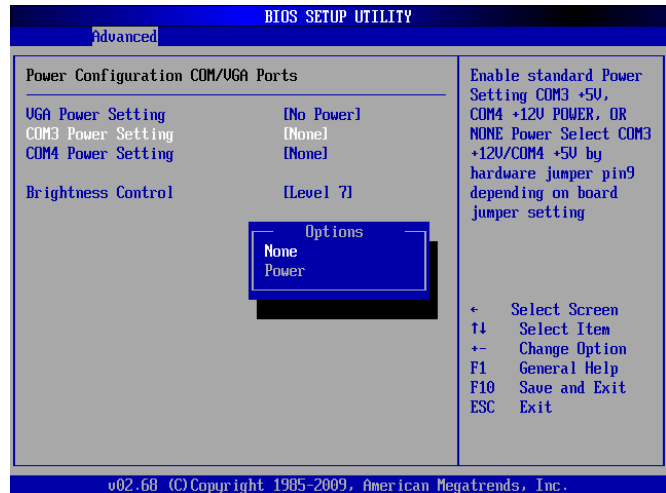

If necessary change the voltage of the COM port by adjusting the JP18 jumper setting


COM3/COM4 Power Setting			Location												
Function		JP18													
COM3	▲ +5V	<table border="1"> <tr><td>1</td><td>3</td><td>5</td><td>7</td></tr> <tr><td>■</td><td>□</td><td>□</td><td>□</td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td></tr> </table>	1	3	5	7	■	□	□	□	2	4	6	8	
	1	3	5	7											
■	□	□	□												
2	4	6	8												
+12V	<table border="1"> <tr><td>1</td><td>3</td><td>5</td><td>7</td></tr> <tr><td>□</td><td>■</td><td>□</td><td>□</td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td></tr> </table>	1	3	5	7	□	■	□	□	2	4	6	8		
1	3	5	7												
□	■	□	□												
2	4	6	8												
COM4	▲ +5V	<table border="1"> <tr><td>1</td><td>3</td><td>5</td><td>7</td></tr> <tr><td>□</td><td>□</td><td>■</td><td>□</td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td></tr> </table>	1	3	5	7	□	□	■	□	2	4	6	8	
	1	3	5	7											
□	□	■	□												
2	4	6	8												
+12V	<table border="1"> <tr><td>1</td><td>3</td><td>5</td><td>7</td></tr> <tr><td>□</td><td>□</td><td>□</td><td>■</td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td></tr> </table>	1	3	5	7	□	□	□	■	2	4	6	8		
1	3	5	7												
□	□	□	■												
2	4	6	8												

### Cash Drawer Power Setting

Function	JP19						
▲+19V	<table border="1"> <tr> <td>1</td> <td>3</td> </tr> <tr> <td>■</td> <td>□</td> </tr> <tr> <td>2</td> <td>4</td> </tr> </table>	1	3	■	□	2	4
1	3						
■	□						
2	4						
+12V	<table border="1"> <tr> <td>1</td> <td>3</td> </tr> <tr> <td>□</td> <td>■</td> </tr> <tr> <td>2</td> <td>4</td> </tr> </table>	1	3	□	■	2	4
1	3						
□	■						
2	4						

### Power Mode Setting

Function	JP9			
▲ATX Power	<table border="1"> <tr> <td>1</td> </tr> <tr> <td>□</td> </tr> <tr> <td>2</td> </tr> </table>	1	□	2
1				
□				
2				
AT Power	<table border="1"> <tr> <td>1</td> </tr> <tr> <td>■</td> </tr> <tr> <td>2</td> </tr> </table>	1	■	2
1				
■				
2				

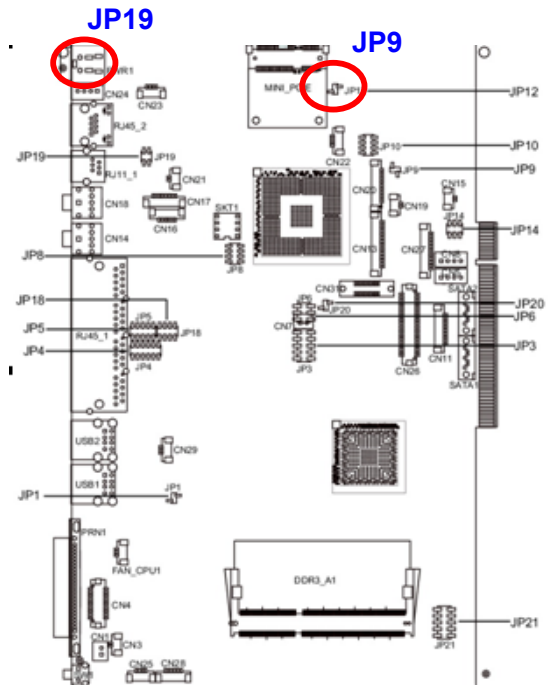

### System Reset


Function	JP12				
▲ System Normal	<table style="margin-left: auto; margin-right: auto;"> <tr><td>1</td></tr> <tr><td><input type="checkbox"/></td></tr> <tr><td><input type="checkbox"/></td></tr> <tr><td>2</td></tr> </table>	1	<input type="checkbox"/>	<input type="checkbox"/>	2
1					
<input type="checkbox"/>					
<input type="checkbox"/>					
2					
System Reset	<table style="margin-left: auto; margin-right: auto;"> <tr><td>1</td></tr> <tr><td><input checked="" type="checkbox"/></td></tr> <tr><td><input checked="" type="checkbox"/></td></tr> <tr><td>2</td></tr> </table>	1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	2
1					
<input checked="" type="checkbox"/>					
<input checked="" type="checkbox"/>					
2					

### System Indicator

Function	JP10																
▲ Disable	<table style="margin-left: auto; margin-right: auto;"> <tr><td>1</td><td>3</td><td>5</td><td>7</td></tr> <tr><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td></tr> <tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr> </table>	1	3	5	7	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	2	4	6	8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1	3	5	7														
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>														
2	4	6	8														
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>														
Enable	<table style="margin-left: auto; margin-right: auto;"> <tr><td>1</td><td>3</td><td>5</td><td>7</td></tr> <tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td></tr> <tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr> </table>	1	3	5	7	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	2	4	6	8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1	3	5	7														
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>														
2	4	6	8														
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>														

### Inverter Selection

Function	JP14												
▲ CCFL	<table style="margin-left: auto; margin-right: auto;"> <tr><td>1</td><td>3</td><td>5</td></tr> <tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr> <tr><td>2</td><td>4</td><td>6</td></tr> <tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td></tr> </table>	1	3	5	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	2	4	6	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
1	3	5											
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>											
2	4	6											
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>											
LED	<table style="margin-left: auto; margin-right: auto;"> <tr><td>1</td><td>3</td><td>5</td></tr> <tr><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr> <tr><td>2</td><td>4</td><td>6</td></tr> <tr><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td></tr> </table>	1	3	5	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	2	4	6	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
1	3	5											
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>											
2	4	6											
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>											

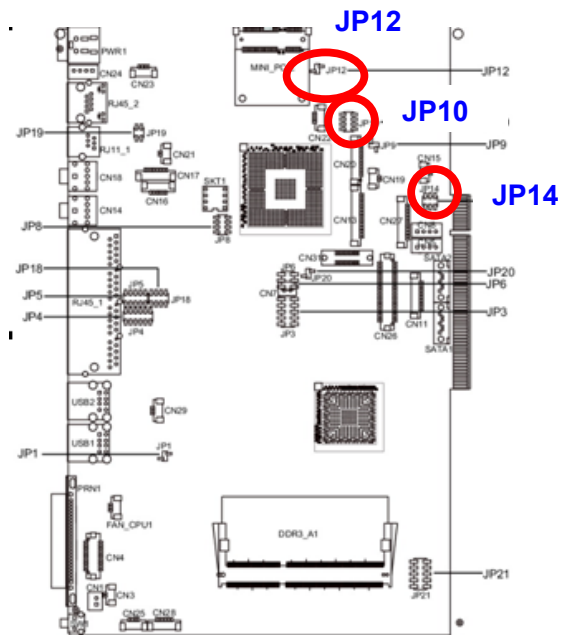




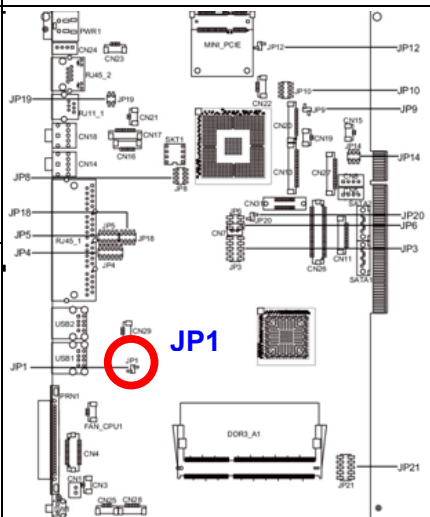

## CMOS Operation Mode

### CMOS Reset

To clear the CMOS

1. Remove the power cable from the system.
2. Open the system, and set the 'CMOS Operation jumper' from 'CMOS Normal' to 'CMOS Reset'. (refer to the jumper shown below)
3. Connect the power cable to the system, and **power on the system**:  
 in ATX mode: press the power button and it will fail power on  
 in AT mode: turn on system power.
5. Remove the power cable from the system.
6. Return the "CMOS Operation mode" jumper setting from "CMOS Reset" to "CMOS normal".
7. Connect the power cable and power on the system.


### CMOS Operation Mode

Function	JP1	Location
▲ CMOS Normal		
CMOS Reset		


## Display Brightness Control

The display brightness can be changed in the BIOS Setup utility.

1. Power on the system, and press the <DEL> key when the system is booting up to enter the BIOS Setup utility.
2. Select the Advanced tab
3. Select **Power Configuration COM/VGA Ports** and press <Enter> to go to display the available options.

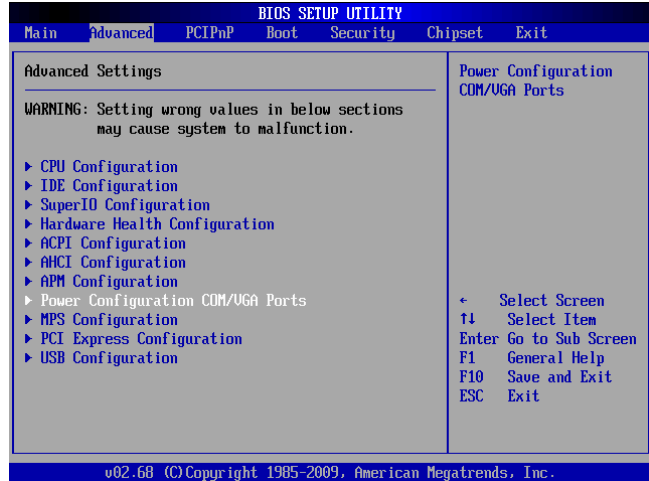

4. To change the brightness, select **Brightness Control** and press <Enter>. Choose the desired brightness level (0~7) press <Enter>. Save the change by pressing F10. NOTE: the new brightness will take effect after the system has restarted.

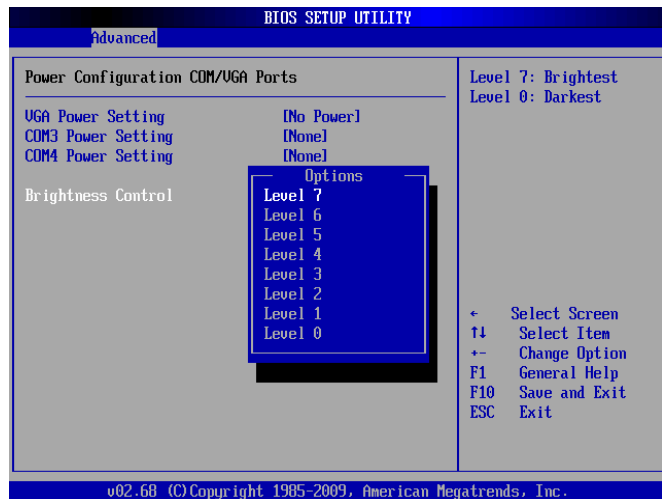

### VGA Power Setting

This setting is not used on the Galéo 200. It should be set to **No Power**

### LCD ID Setting


Resolution			LVDS		JP8												
			Bits	Channel													
1024	x	768	24	Single	<table border="1"> <tr> <td>1</td><td>3</td><td>5</td><td>7</td> </tr> <tr> <td><input type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td> </tr> <tr> <td>2</td><td>4</td><td>6</td><td>8</td> </tr> </table>	1	3	5	7	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	2	4	6	8
1	3	5	7														
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>														
2	4	6	8														

▲ = Manufacturer Default Setting

OPEN

SHORT

### Location

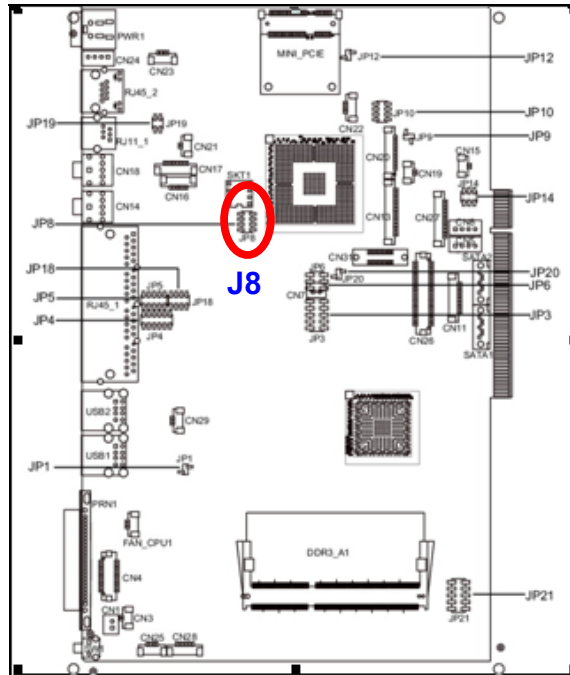

## 8. BIOS Settings

---

You can check or modify your BIOS settings in the BIOS Setup utility. To access the BIOS Setup utility, power on the system, and press the <DEL> key a few times.

**Note:** The BIOS setup menus shown in this section are for reference only and may not exactly match the items of your BIOS version.


### BIOS Main menu

When the BIOS Main Screen shows basic information, such as BIOS version, system memory, time and date.

BIOS SETUP UTILITY						
Main	Advanced	PCIPnP	Boot	Security	Chipset	Exit
<b>System Overview</b>		Use [ENTER], [TAB] or [SHIFT-TAB] to select a field.				
<b>AMIBIOS</b>		Use [+] or [-] to configure system Time.				
Version :C486-084						
Build Date:01/05/11						
<b>Processor</b>						
Speed :255MHz						
Count :255						
<b>System Memory</b>						
Size :1014MB		← Select Screen				
System Time [15:46:03]		↑↓ Select Item				
System Date [Thu 01/06/2011]		+- Change Field				
		Tab Select Field				
		F1 General Help				
		F10 Save and Exit				
		ESC Exit				
v02.68 (C) Copyright 1985-2009, American Megatrends, Inc.						


## Advanced menu

Use this menu to set the Advanced Features available on the system.

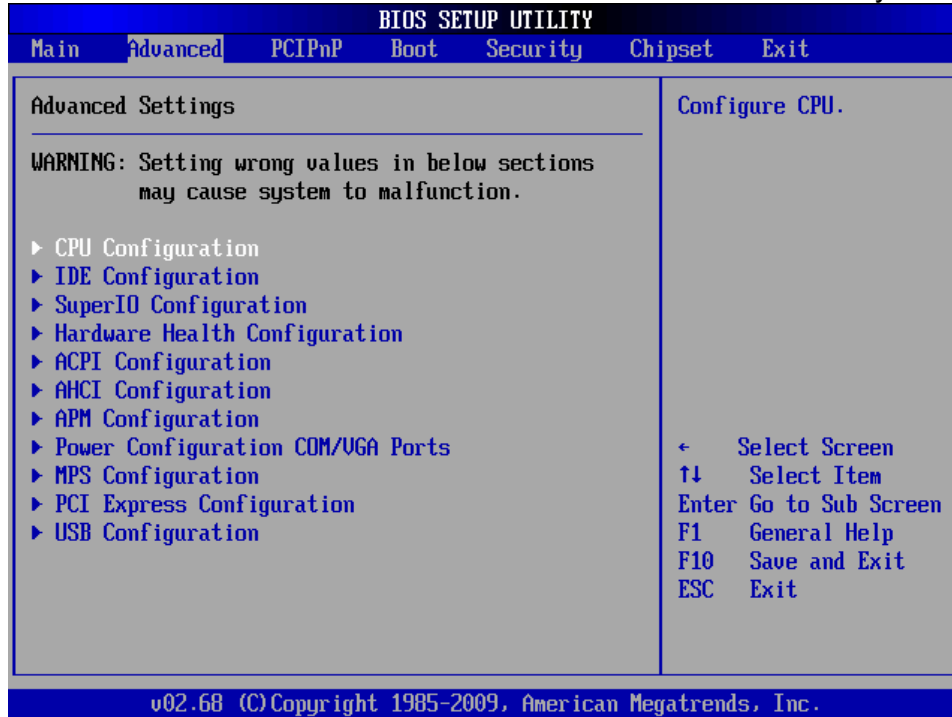

## PCIPnP menu

Use this menu to check or change the values of advanced PCI/PnP settings

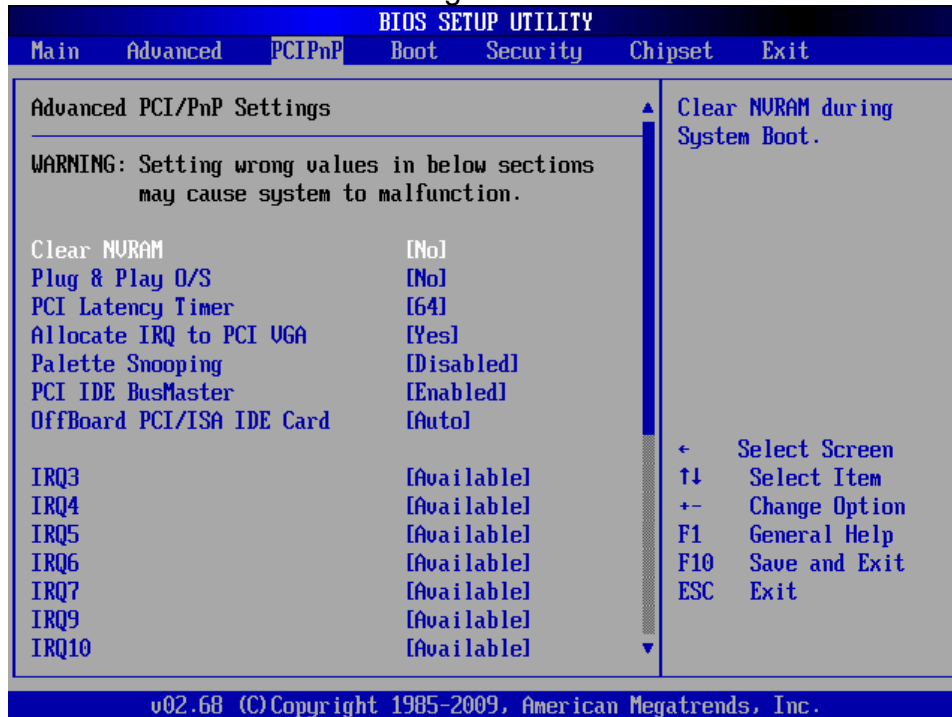


## Boot menu

Use this menu to check or change your boot preferences.




## Security menu

Use this menu to set security passwords.

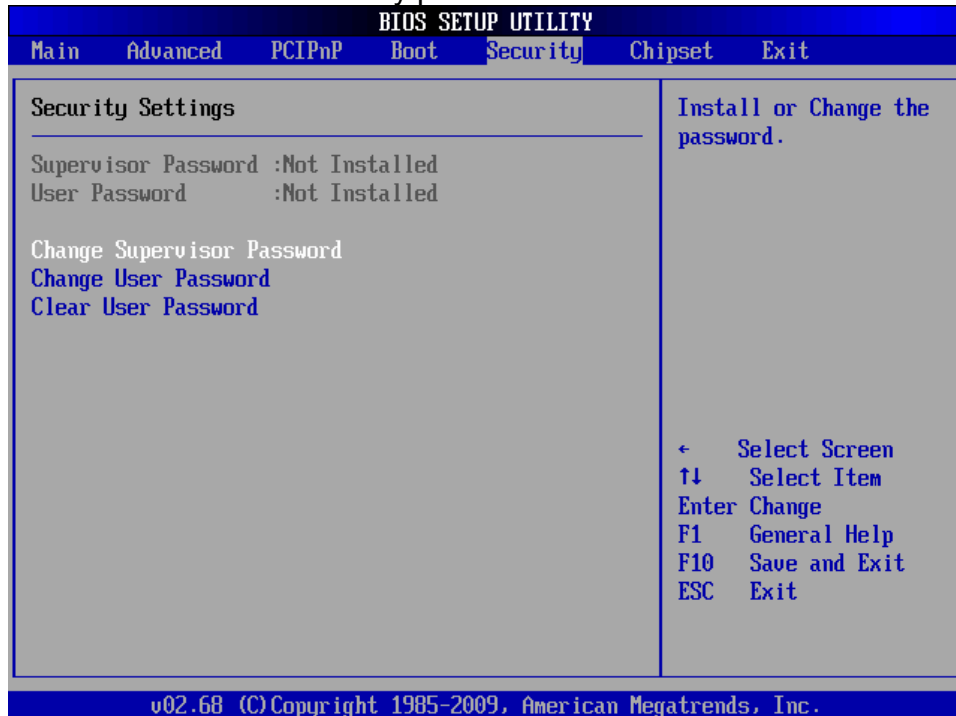

## Chipset menu


Use this menu to check or modify chipset parameters

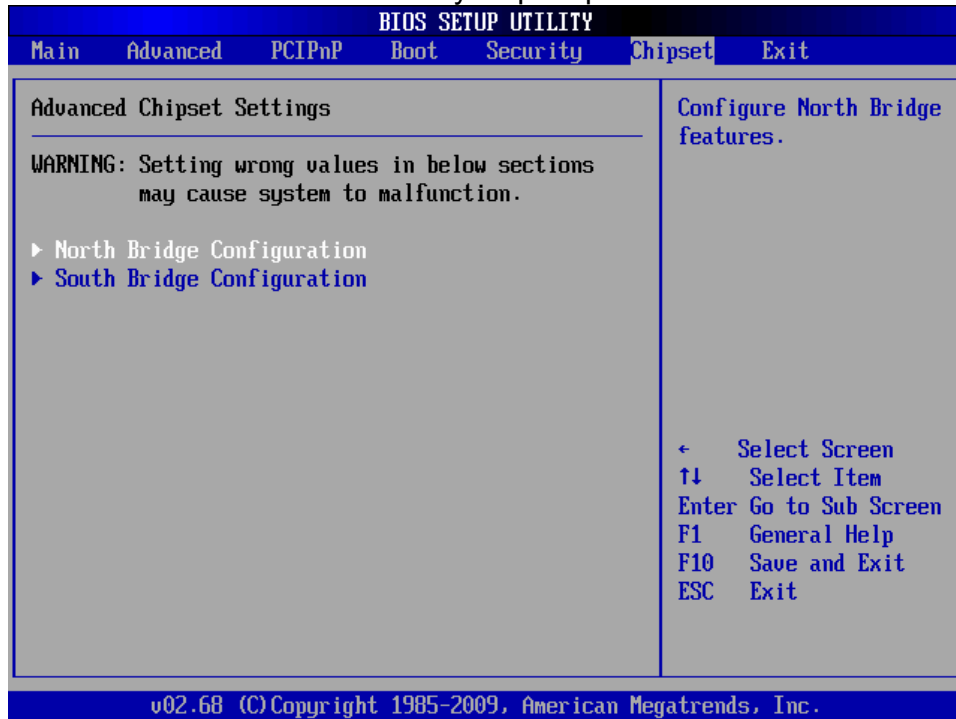

## Exit menu

Use this menu to save or discard any changes you have made.


Select **Load Optimal Defaults** to return the BIOS settings to the original factory settings.

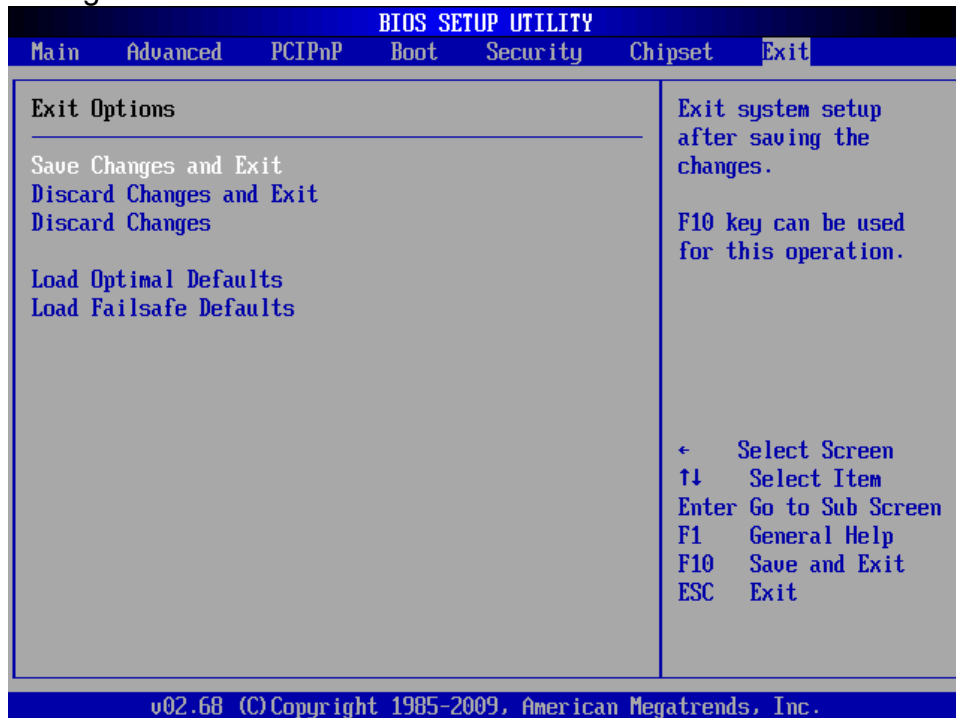


## 9. Dimensions

---

All dimensions in mm

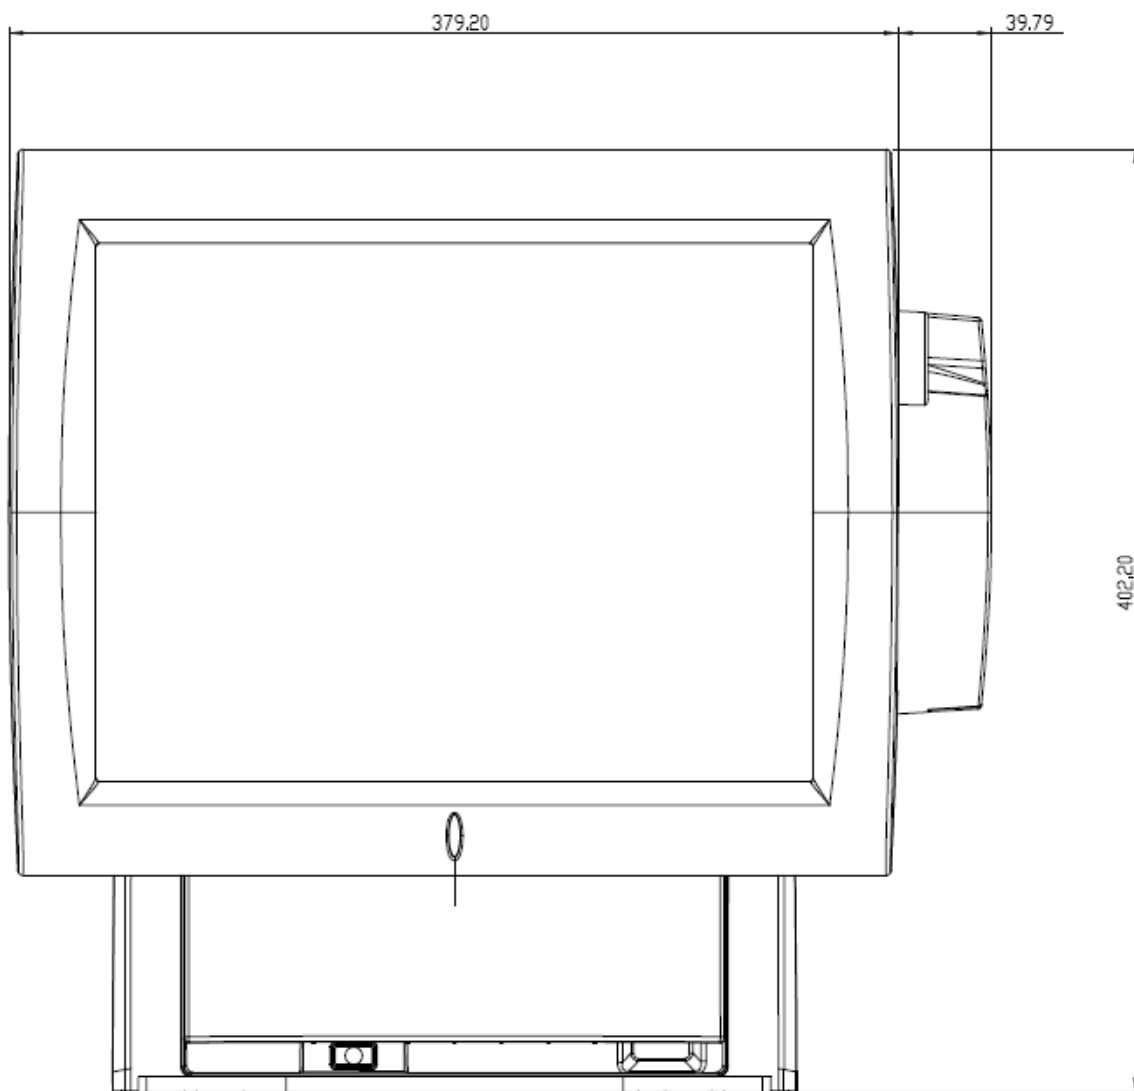



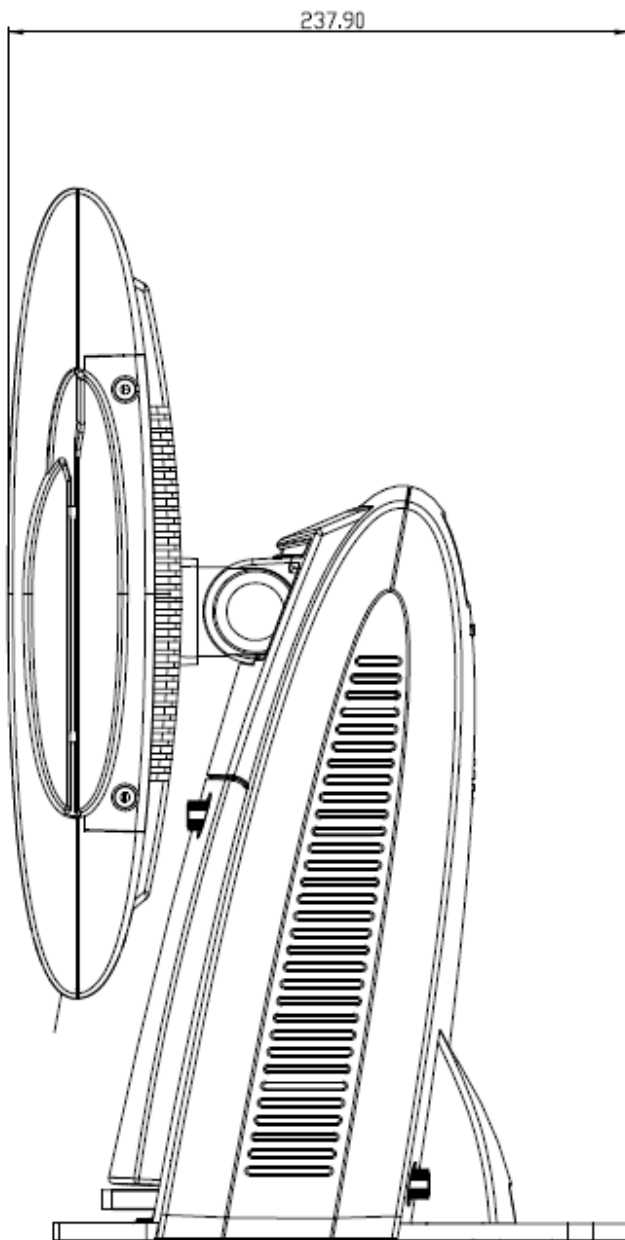

## 10. Customer Display Command Settings

---

The Customer Display can be controlled through serial port **COM7** after installation of the USB VFD driver.

The Customer Display default settings are:

- **EPSON ESC/POS command set**
- **9600 Baud, 8 bits, no parity, no flow control**

### Software Utilities

A configuration utility is provided for the customer display on the driver CD.  
(see Appendix: Driver Installation for information about the driver CD)

Folder/File	File Description
<CD>:\Common\CustomerDisplay\Windows	Windows utility

A user manual for the utility is also available on the CD at the following location:

Folder/File	File Description
<CD>:\Common\CustomerDisplay\	User manual

### Software Status Setting Commands

When the system is powered on, it will read the EEPROM setting to set the **Command Type**, **Baud Rate**, **Parity**, **Data Length**, **Demo Mode** setting and **International Character Set**. The user can change the Software Status Setting Commands using the command sequences described below.

## Baud Rate Setting Command

**STX 05 B n ETX** /Change the baud rate setting/  
 ASCII Format STX 05 B n ETX  
 Dec. Format [02] [05] [66] n [03]  
 Hex. Format [02h][05h][42h] n [03h] n=30h, 31h, 36h or 37h  
 Description Change the display communication baud rate. The baud rate setting can be selected from 4800 to 38400.

n	Baud rate
31h	4800
30h	9600
37h	19200
36h	38400

## Parity Check Setting Command

**STX 05 P n ETX** /Change the Parity check setting/  
 ASCII Format STX 05 P n ETX  
 Dec. Format [02] [05] [80] n [03]  
 Hex. Format [02h][05h][50h] n [03h] n=31h, 33h, 35h  
 Description Change the display communication parity. Set 8 data bit and the parity set for even or non-parity.

n	Parity
31h	None
33h	Even
35h	Odd

## Data Length Setting Command

**STX 05 L n ETX** /Change the Data Length Setting/  
 ASCII Format STX 05 L n ETX  
 Dec. Format [02] [05] [76] n [03]  
 Hex. Format [02h][05h][4Ch] n [03h] n=37h, 38h  
 Description Change the display communication data length. Set 8-bits or 7-bits data length.

n	Parity
37h	7 bits
38h	8 bits

## International Character Set Setting Command

n	Character Set (20h – 7Fh)	Code Table (80H-FFH)	Note
30h	U.S.A.	CP-437 (USA, Standard Europe)	
31h	FRANCE	CP-858 (Multilingual + Euro Symbol)	
32h	GERMANY		
33h	U.K.		
34h	DENMARK I		
35h	SWEDEN		
36h	ITALY		
37h	SPAIN		
38h	JAPAN	Katakana	
39h	NORWAY	CP-858 (Multilingual+ Euro Symbol)	
3Ah	DENMARK II		
3Bh	Slawie		
3Ch	RUSSIA		
3Dh	U.S.A.	CP-860 (Portuguese)	
3Eh	U.K.	Greek	
3Fh	U.S.A.	CP-852 (Hungary)	
40h	U.S.A.	CP-862 (Hebrew)	
41h	U.S.A.	CP-863 (Canadian-French)	
42h	U.S.A.	CP-865 (Nordic)	
43h	U.S.A.	CP-866 (Cyrillic)	
44h	U.S.A.	Windows-1251 (Cyrillic)	
45h	U.S.A.	Windows-1252 (West European Latin)	
46h	U.S.A.	Windows-1255 (Hebrew)	
47h	U.S.A.	Windows-1257 (Baltic)	
48h	U.S.A.	Windows-1253 (Greek)	
49h	U.S.A.	Windows-1250 (East European Latin)	
4Ah ~ 4Eh	Reserved	Reserved	
4Fh	User Defined Character Set		

## Select International Character Set Command

**STX 05 T n ETX** /Select International Character Set Command/  
 ASCII Format STX 05 T n ETX  
 Dec. Format [02] [05] [84] n [03]  
 Hex. Format [02h][05h][54h] n [03h] 00h ≤ n ≤ 1Fh  
 Description Select International Character Set

Select international character set (20H~7Fh) by command “**STX 05 T n ETX**”

n	International character set	n	International character set	n	International character set
00h	U.S.A.	06h	ITALY	0Ch	RUSSIA
01h	FRANCE	07h	SPAIN	0Dh	Not used
02h	GERMANY	08h	JAPAN	0Eh	Not used
03h	U.K.	09h	NORWAY	0Fh	Not used
04h	DENMARK I	0Ah	DENMARK II	1Fh	User-Defined
05h	SWEDEN	0Bh	SLAVONIC		

## Select Character Code Table Command

**STX 05 U n ETX** /Select Character Code Table Command/  
 ASCII Format STX 05 U n ETX  
 Dec. Format [02] [05] [85] n [03]  
 Hex. Format [02h][05h][55h] n [03h] 00h ≤ n ≤ 1Fh  
 Description Select Character Code Table

Select character code table (80H~FFh) by command “**STX 05 U n ETX**”

n	Character code table	n	Character code table	n	Character code table
00h	CP-437 (USA, Standard Europe)	07h	Russia	0Fh	Windows-1257 (Baltic)
01h	Katakana (for Japan)	08h	Greek	10h	Windows-1252 (West European Latin)
02h	CP-850 (Multilingual)	09h	CP-852 (Hungary)	11h	Windows-1253 (Greek)
03h	CP-860 (Portuguese)	0Ah	CP-862 (Hebrew)	12h	Windows-1250 (East European Latin)
04h	CP-863 (Canadian-French)	0Bh	CP-866 (Cyrillic)	13h	CP-858 (Multilingual+ Euro Symbol)
05h	CP-865 (Nordic)	0Ch	Windows-1251 (Cyrillic)	1Fh	User Defined
06h	Slawie	0Eh	Windows-1255 (Hebrew)		

## Command Type Setting Command

**STX 05 C n ETX** /Change the command type setting/  
 ASCII Format STX 05 C n ETX  
 Dec. Format [02] [05] [67] n [03]  
 Hex. Format [02h][05h][43h] n [03h]  $30h \leq n \leq 37h$   
 Description This command will change the command type and initialize the display.  
 The display emulation mode is based on DSP800/ ESC/ ADM 787/ POS7300/ AEDEX/ UTC/ CD5220 mode

n	Command Type	n	Command Type
30h	DSP800	34h	AEDEX
31h	ESC/POS	35h	UTC/P
32h	POS7300	36h	UTC/S
33h	ADM787	37h	CD5220

## Run Demo message

**STX 05 D 08 ETX** /Run demo message/  
 ASCII Format STX 05 D 08 ETX  
 Dec. Format [02][05][68][08][03]  
 Hex. Format [02h][05h][44h][08h][03h]  
 Description Run demo message for the display.  
 The demo message is available in POS7300, DSP800, EPSON ESC/POS and CD5220 command modes.

## Show Firmware Version

**STX 05 V 01 ETX** /Show Firmware Version/  
 ASCII Format STX 05 V 01 ETX  
 Dec. Format [02][05][86][01][03]  
 Hex. Format [02h][05h][56h][01h][03h]  
 Description Show firmware version.

## User Defined Character Command Set

Function	Command	Description
Del 1 Character	[02h][FDh][55h][00h][n]	Delete one user defined character data. [n] = 20h ~ FFh for displayable character codes
Del All Characters	[02h][FDh][55h][01h][00h]	Delete All User-Define Characters
Set 1 Character	[02h][FDh][55h][02h][n] [m1][m2][m3][m4][m5]	Set one user defined character [n] = 20h ~ FFh for displayable character codes/[m1]~[m5] = Character data byte 1 ~ 5/Ref. table below
Read 1 Character	[02h][FDh][55h][03h][n]	Read one user define character data [n] = 20h ~ FFh for displayable character codes
Read All Characters	[02h][FDh][55h][04h][00h]	Read all user defined character data (Character 20h ~ FFh)

### Set User-Define Character 5x7 dot layer out

Bit assignment: 

bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0
-------	-------	-------	-------	-------	-------	-------	-------

5x7 dot bit assignment: 1 means fill dot, 0 means empty dot.

m1 bit 7	m1 bit 6	m1 bit 5	m1 bit 4	m1 bit 3
m1 bit 2	m1 bit 1	m1 bit 0	m2 bit 7	m2 bit 6
m2 bit 5	m2 bit 4	m2 bit 3	m2 bit 2	m2 bit 1
m2 bit 0	m3 bit 7	m3 bit 6	m3 bit 5	m3 bit 4
m3 bit 3	m3 bit 2	m3 bit 1	m3 bit 0	m4 bit 7
m4 bit 6	m4 bit 5	m4 bit 4	m4 bit 3	m4 bit 2
m4 bit 1	m4 bit 0	m5 bit 7	m5 bit 6	m5 bit 5

0	1	1	1	0
1	0	0	0	1
1	0	0	1	1
1	0	1	0	1
1	1	0	0	1
1	0	0	0	1
0	1	1	1	0

Ex: character "0"

m1 byte data = 0x74

m2 byte data = 0x67

m3 byte data = 0x5C

m4 byte data = 0xC5

m5 byte data = 0xC0

## Command List Table

Command Set	POS 7300	CD 5220	EPSON D101	UTC/S	UTC/P	AEDEX	ADM 788	DSP 800
Move cursor right	○	○	○					
Move cursor left	○	○	○					
Move cursor up	○	○	○					
Move cursor down	○	○	○					
Move cursor to right-most position	○	○	○					
Move cursor to left-most position	○	○	○					
Move cursor to home position	○	○	○					
Move cursor to bottom position	○	○	○					
Move cursor to specified position	○	○	○					○
Clear display screen	○	○	○	○			○	
Clear cursor line	○	○	○					
Brightness adjustment	○	○	○					○
Blink display screen	○	○	○					○
Initialize display	○	○	○					○
Select character code table	○	○	○					
Select international character set	○	○	○					○
Select/cancel reverse character	○		○					
Overwrite mode	○	○	○	○				
Vertical scroll mode	○	○	○	○				
Horizontal scroll mode	○	○	○					
Set/cancel the window range	○	○	○					
Select peripheral device	○	○	○					○
Set starting/ending position of macro definition			○					
Execute and quit macro			○					
Execute self-test	○	○	○					○
Display time	○		○		○	○		
Display time continuously	○		○					
Display position	○			○				
Cursor on/off	○	○	○	○				
Change to UTC enhanced mode				○				
Change to UTC standard mode					○			
Write string to upper line	○	○			○	○		
Upper line message continuous scroll	○	○			○	○		
Bottom line message scroll continuously	○							
Message vertical down scroll continuously	○							
Message vertical upper scroll continuously	○							
Carriage return	○			○			○	
Line feed	○			○				
Back space	○			○				
Horizontal tab	○			○				
Command type select		○	○					○
Upper line message scroll once pass					○	○		
Change attention code					○	○		
Two line display					○	○		



Command Set	POS 7300	CD 5220	EPSON D101	UTC/S	UTC/P	AEDEX	ADM 788	DSP 800
Clear upper line and move cursor to upper left-end position							○	
Clear bottom line and move cursor to bottom left-end position							○	
Set period to upper line, last n position							○	
Set line blinking, upper line	○						○	
Clear line blinking, upper line	○						○	
Clear field 1 and move cursor to field 1, first position							○	
Clear field 2 and move cursor to field 2, first position							○	
Clear display range from n position to m								○
Save the current displaying data to n layer for								○
Turn annunciator on/off	○		○					
Specify period	○		○					
Specify comma	○		○					
Specify semicolon (period + comma)	○		○					
Set/Cancel User-Define Character Set			○					
Create User-define Character			○					○
Delete All User-Define Character			○					
Store User-Define Character to EEPROM			○					
Load User-Define Character from EEPROM			○					
Delete 1 User-Define Character								○

## Command Details

### POS7300 Series Command List

Command	Code (hex)	Function Description
ESC F A [DATA] CR	1B 46 41 [DATA] 0D	➤ Write string to upper line Maximal [DATA] length is 40
ESC F B [DATA] CR	1B 46 42 [DATA] 0D	➤ Write string to lower line Maximal [DATA] length is 40
ESC F D [DATA] CR	1B 46 44 [DATA] 0D	➤ Upper line message scroll continuously Maximal [DATA] length is 40
ESC F O [DATA] CR	1B 46 4F [DATA] 0D	➤ Bottom line message scroll continuously Maximal [DATA] length is 40
ESC P x y	1B 50 x y	➤ Move cursor to specified position x = 1 ~ 14h, for columns location. y = 1 ~ 2, for lines location.
ESC _ n	1B 5F n	➤ Set cursor on/off n = 00 ~ 01
ESC DC1	1B 11	Overwrite mode
ESC DC2	1B 12	Vertical scroll mode
ESC DC3	1B 13	Horizontal scroll mode
ESC @	1B 40	Initialize display
US MD1 n	1F 01 n	➤ Message vertical upper scroll continuously n = 01 ~ 0Ch
US MD2 n	1F 02 n	➤ Message vertical down scroll continuously n = 01 ~ 0Ch
US DC1 n	1F 11 n	➤ Set line blinking n = '1' ~ '2' ■ n = '1' up line ■ n = '2' low line
US DC2 n	1F 12 n	➤ Clear line blinking n = '1' ~ '2' ■ n = '1' up line ■ n = '2' low line
US # n x	1F 23 n x	➤ Turn annunciator on/off. n = 0 for annunciator off n = 1 for annunciator on ➤ x = 1 ~ 14h, for columns location.
US , n	1F 2C n	➤ Specify comma n = a displayable character code
US . n	1F 2E n	➤ Specify period n = a displayable character code
US ; n	1F 3B n	➤ Specify semicolon (period + comma) n = a displayable character code
US @	1F 40	Execute self - test
US E n	1F 45 n	➤ Blink display screen n = 00h ~ FFh ■ n = 0 for no blink
US T h m	1F 54 h m	➤ Display time 0 ≤ h ≤ 17h, for hours setting. ➤ 0 ≤ m ≤ 3Bh, for minutes setting.
US U	1F 55	Display time continuously
US X n	1F 58 n	➤ Brightness adjustment n = 1 ~ 4
US r n	1F 72 n	➤ Select/cancel reverse character. n = 00,01
NULL H	0 48	Move cursor up
NULL K	0 4B	Move cursor left
NULL M	0 4D	Move cursor right

Command	Code (hex)	Function Description
NULL P	0 50	Move cursor down
NULL G	0 47	Move cursor to left-most position
NULL O	0 4F	Move cursor to right-most position
BS	08	Back space
HT	09	Horizontal tab
LF	0A	Line feed
HOM	0B	Move cursor to home position
US B	1F 42	Move cursor to bottom position
CLR	0C	Clear display screen
CLR	12	
CR	0D	Carriage return
CAN	18	Clear cursor line, and clear string mode
DLE n	10 n	Display position ➤ n = 0 ~ 27h, for location.
ESC W n s x1 y1 x2 y2	1B 57 n s x1 y1 x2 y2	Set or cancel the window range ➤ n = 1 ~ 4, for window number ➤ s = 0: cancel ➤ s = 1: set ➤ 1 ≤ x1 ≤ x2 ≤ 14h, for columns location. ➤ 1 ≤ y1 ≤ y2 ≤ 2, for lines location.
ESC R n	1B 52 n	Select international character set (20H~7Fh). ➤ n = 00 ~ 1Fh. See note *1
ESC t n	1B 74 n	Select character code table (80H~FFh). ➤ n = 00 ~ 1Fh. See note *2
ESC = n	1B 3D n	Select peripheral device, display or printer n = 1~3 ■ n = '1': enable printer only ■ n = '2': enable display only ■ n = '3': enable both of printer and display

**Note:**

1. Select international character set (20H~7Fh) by command “ESC R n”

n	International character set	n	International character set	n	International character set
00h	U.S.A.	05h	SWEDEN	0Ah	DENMARK II
01h	FRANCE	06h	ITALY	0Bh	SLAVONIC
02h	GERMANY	07h	SPAIN	0Ch	RUSSIA
03h	U.K.	08h	JAPAN		
04h	DENMARK I	09h	NORWAY	1Fh	User Defined

2. Select character code table (80H~FFh) by command “ESC t n”

n	Character code table	n	Character code table	n	Character code table
00h	CP-437 (USA, Standard Europe)	07h	Russia	0Fh	Windows-1257 (Baltic)
01h	Katakana (for Japan)	08h	Greek	10h	Windows-1252 (West European Latin)
02h	CP-850 (Multilingual)	09h	CP-852 (Hungary)	11h	Windows-1253 (Greek)
03h	CP-860 (Portuguese)	0Ah	CP-862 (Hebrew)	12h	Windows-1250 (East European Latin)
04h	CP-863 (Canadian-French)	0Bh	CP-866 (Cyrillic)	13h	CP-858 (Multilingual+ Euro Symbol)
05h	CP-865 (Nordic)	0Ch	Windows-1251 (Cyrillic)		
06h	Slawie	0Eh	Windows-1255 (Hebrew)	1Fh	User Defined

## CD5220 Standard Mode Command List

Command	Code (hex)	Function Description
ESC DC1	1B 11	Overwrite mode
US SOH	1F 01	
ESC DC2	1B 12	Vertical scroll mode
US STX	1F 02	
ESC DC3	1B 13	Horizontal scroll mode
US ETX	1F 03	
ESC Q A [DATA] CR	1B 51 41 [DATA] 0D	Set the string display mode, write string to upper line. *1 ➤ Maximal [DATA] length is 20
ESC Q B [DATA] CR	1B 51 42 [DATA] 0D	Set the string display mode, write string to lower line. *1 ➤ Maximal [DATA] length is 20
ESC Q D [DATA] CR	1B 51 44 [DATA] 0D	Upper line message scroll continuously. *1 *2 ➤ Maximal [DATA] length is 40
ESD [ D BS	1B 5B 44 08	Move cursor left
ESC [ C HT	1B 5B 43 09	
ESC [ A US LF	1B 5B 41 1F 0A	Move cursor up
ESC [ B LF	1B 5B 42 0A	
ESC [ H HOM	1B 5B 48 0B	Move cursor to home position
ESC [ L CR	1B 5B 4C 0D	
ESC [ R US CR	1B 5B 52 1F 0D	Move cursor to right-most position
ESC [ K US B	1B 5B 4B 1F 42	
ESC # n	1B 23 n	Command type select ➤ n = 30h ~ 37h
US @	1F 40	Execute self test
US E n	1F 45 n	Blink display screen ➤ n = 00h ~ FFh ■ n = 0 for no blink
ESC I x y	1B 6C x y	Move cursor to specified position ➤ x = 1 ~ 14h, for columns location. ➤ y = 1,2, for lines location.
US \$ x y	1F 24 x y	
ESC # n	1B 23 n	Command type select ➤ n = 30h ~ 37h
US E n	1F 45 n	Blink display screen ➤ n = 00h ~ FFh ■ n = 0 for no blink
ESC I x y	1B 6C x y	Move cursor to specified position ➤ x = 1 ~ 14h, for columns location. ➤ y = 1,2, for lines location.
ESC @	1B 40	

Command	Code (hex)	Function Description
ESC W s x1 x2 y	1B 57 s x1 x2 y	Set or cancel the window range at horizontal scroll mode ➤ $1 \leq x1 \leq x2 \leq 14h$ , for columns location. ➤ $y = 1 \sim 2$ , for lines location. ➤ <b>s</b> = 0: cancel <b>s</b> = 1: set
CLR	0C	Clear display screen, and clear string mode
CAN	18	Clear cursor line, and clear string mode
ESC * n	1B 2A n	Brightness adjustment ➤ $n = 1 \sim 4$ , $n = 4$ for highest brightness
US X n	1F 58 n	
ESC _ n	1B 5F n	Set cursor on/off ➤ $n = 1$ : cursor on $n = 0$ : cursor off
ESC f n	1B 66 n	Select international Character ➤ About <b>n</b> , refer. <sup>*3</sup>
ESC c n	1B 63 n	Select character code table ➤ About <b>n</b> , refer. <sup>*4</sup>
ESC = n	1B 3D n	Select peripheral device, display or printer ➤ $n='1'$ : enable printer only $n='2'$ : enable display only $n='3'$ : enable both of printer and display

Note:

1. While using command "ESC Q A" or "ESC Q B", other commands cannot be used except when using command "CLR" or "CAN" to change operating mode.
2. When using command "ESC Q D", the upper line message will scroll continuously until a new command is received, it will then clear the upper line and move the cursor to the upper left-end position.
3. Select the international Character set (20h – 7Fh) by command "ESC f n".

Parameter "n"		International Character Set	Parameter "n"		International Character Set
Character	Hex		Character	Hex	
'A'	41h	U.S.A.	'N'	4Eh	Norway
'G'	47h	Germany	'W'	57h	Sweden
'I'	49h	Italy	'D'	44h	Denmark I
'J'	4Ah	Japan	'E'	45h	Denmark II
'U'	55h	U.K.	'L'	4Ch	Slavonic
'F'	46h	France	'R'	52h	Russia
'S'	53h	Spain		1Fh	User-Define

4. Select character code table (80H-FFH) by command "ESC c n".

Parameter "n"		character Code Table
Character	Hex	
'A'	41h	Compliance with ASCII code (CP-437)
'J'	4Ah	Compliance with JIS code (Katakana)
'L'	4Ch	Compliance with Slawie code
'R'	52h	Compliance with RUSSIA code
'M'	4Dh	CP-850 (Multilingual)
'P'	50h	CP-858 (Multilingual+ Euro Symbol)
'p'	70h	CP-860 (Portuguese)
'F'	46h	CP-863 (Canadian-French)
'N'	4Eh	CP-865 (Nordic)
'u'	75h	CP-852 (Hungary)
'H'	48h	CP-862 (Hebrew)
'C'	43h	CP-866 (Cyrillic)
'G'	47h	Greek
'c'	63h	Windows-1251 (Cyrillic)
'W'	57h	Windows-1252 (West European Latin)
'h'	68h	Windows-1255 (Hebrew)
'B'	42h	Windows-1257 (Baltic)
'g'	67h	Windows-1253 (Greek)
'E'	45h	Windows-1250 (East European Latin)
	1Fh	User Defined

### UTC Standard Mode Command List

Command	Code (hex)	Function Description
BS	08	Back space
HT	09	Horizontal tab
LF	0A	Line feed
CR	0D	Carriage return
DLE n	10 n	Display position ➤ n = 0 ~ 27h, for location.
DC1	11	Over write display mode
DC2	12	Vertical scroll mode
DC3	13	Cursor on
DC4	14	Cursor off
US	1F	Clear display
ESC d	1B 64	Change to UTC enhanced mode

## UTC Enhanced Mode Command List

Command	Code (hex)	Function Description
ESC u A [DATA] CR	1B 75 41 [DATA] 0D	➤ Upper line display Maximal [DATA] length is 20
ESC u B [DATA] CR	1B 75 42 [DATA] 0D	➤ Bottom line display Maximal [DATA] length is 20
ESC u D [DATA] CR	1B 75 44 [DATA] 0D	➤ Upper line message scroll continuously Maximal [DATA] length is 40
ESC u E h h : m m CR	1B 75 45 h h ':' m m 0D	➤ Display time h, m = '0' ~ '9'
ESC u F [DATA] CR	1B 75 46 [DATA] 0D	➤ Upper line message scroll Once pass Maximal [DATA] length is 40
ESC u H n m CR	1B 75 48 n m 0D	➤ Change attention code n = 1 ~ 20h m = 1 ~ 20h
ESC u I [DATA] CR	1B 75 49 [DATA] 0D	➤ Two line display Maximal [DATA] length is 40
ESC RS CR	1B 0F 0D	➤ Change to UTC standard mode

## AEDEX/EMAX Mode Command List

Command	Code (hex)	Function Description
!# 1 [DATA] CR	21 23 31 [DATA] 0D	➤ Upper line display Maximal [DATA] length is 20
!# 2 [DATA] CR	21 23 32 [DATA] 0D	➤ Button line display Maximal [DATA] length is 20
!# 4 [DATA] CR	21 23 34 [DATA] 0D	➤ Upper line message scroll Maximal [DATA] length is 60
!# 5 h h : m m CR	21 23 35 h h ':' m m 0D	➤ Display time h, m = '0' ~ '9'
!# 8 n m CR	21 23 38 n m 0D	➤ Change attention code n, m = 1 ~ 20
!# 9 [DATA] CR	21 23 39 [DATA] 0D	➤ Two line display Maximal [DATA] length is 40
!# 6 [DATA] CR	21 23 36 [DATA] 0D	➤ Upper line message scroll once pass Maximal [DATA] length is 60

### ADM787/788 mode command list

Command	Code (hex)	Function Description
CLR	0C	Clear display
CR	0D	Carriage return
SLE1	0E	Clear upper line and move cursor to upper left-end position
SLE2	0F	Clear bottom line and move, Cursor to bottom left-end position
DC0 n	10 n	➤ Set period to upper line last n position n = 31H ~ 37H
DC1 n	11 n	➤ Set line blinking, upper line n = '1' ~ '2' ■ n = '1': up line ■ n = '2': low line
DC2 n	12 n	➤ Clear line blinking, upper line n = '1' ~ '2' ■ n = '1': up line ■ n = '2': low line
SF1	1E	Clear field 1 and move cursor to field 1, first position
SF2	1F	Clear field 2 and move cursor to field 2, first position



## DSP800 Mode Command List

Command	Code (hex)	Function Description
EOT SOH I n ETB	04 01 49 n 17	➤ Select international character set n = 00 ~ 1Fh or 30 ~ 4Fh See note *1
EOT SOH P n ETB	04 01 50 n 17	➤ Move cursor to specified position n = 31h ~ 58h
EOT SOH C n m ETB	04 01 43 n m 17	➤ Clear display range from n position to m position and move cursor to n position 31h ≤ n ≤ m ≤ 58h
EOT SOH S n ETB	04 01 53 n 17	➤ Save current view message to n layer for demo view data n = 31h ~ 35h
EOT SOH D n m ETB	04 01 44 n m 17	➤ Display the saved demo message n = 31h ~ 4Fh m = 31h ~ 33h
EOT SOH A n ETB	04 01 41 n 17 n = 31h~34h	Brightness adjustment
EOT SOH F n ETB	04 01 46 n 17 00h ≤ n ≤ FFh	➤ Blink display Screen n = 00h ~ FFh, n = 0 for no blink
EOT SOH # n ETB	04 01 23 n 17 n = 30~37h	Command type select
EOT SOH % ETB	04 01 25 17	Initialize display
EOT SOH @ ETB	04 01 40 17	Execute self-test
EOT SOH & n [m1~m5] ETB	04 01 26 n [m1~m5] 17	Set One User-Define Character n = 20h ~ FFh for displayable character code [m1 ~ m5] Byte1~Byte5 Define Character
EOT SOH ? n ETB	04 01 3F n 17	Delete One User-Define Character n = 20h ~ FFh for displayable character code
EOT SOH = n ETB	04 01 3D n 17	➤ Select peripheral device, display or printer n = '1': enable printer only n = '2': enable display only n = '3': enable both of printer and display

### Note:

1. Select international character set (20H~7Fh) by command "EOT SOH I n ETB"

n	International character set	n	International character set	n	International character set
00h	U.S.A.	05h	SWEDEN	0Ah	DENMARK II
01h	FRANCE	06h	ITALY	0Bh	SLAVONIC
02h	GERMANY	07h	SPAIN	0Ch	RUSSIA
03h	U.K.	08h	JAPAN		
04h	DENMARK I	09h	NORWAY	1Fh	User-Define
30h	U.S.A.	35h	SWEDEN	3Ah	DENMARK II
31h	FRANCE	36h	ITALY	3Bh	SLAVONIC
32h	GERMANY	37h	SPAIN	3Ch	RUSSIA
33h	U.K.	38h	JAPAN		
34h	DENMARK I	39h	NORWAY	4Fh	User-Define

## EPSON ESC/POS Command List

Command	Code (hex)	Function Description
US r n	1F 72 n	➤ Select/cancel reverse character. n = 00,01
US MD1	1F 01	Specify overwrite mode.
US MD2	1F 02	Specify vertical scroll mode.
US MD3	1F 03	Specify horizontal scroll mode.
CAN	18	Clear cursor line
ESC # n	1B 23 n	➤ Command type select n = 30h ~ 37h
US # n x	1F 23 n x	➤ Turn annunciator on/off. n = 0 for annunciator off n = 1 for annunciator on ➤ x = 1 ~ 14h, for columns location.
US C n	1F 43 n	➤ Set cursor on/off n = 00, 01
BS	08	Move cursor left
HT	09	Move cursor right
US LF	1F 0A	Move cursor up
LF	0A	Move cursor down
US CR	1F 0D	Move cursor to right-most position
CR	0D	Move cursor to left-most position
HOM	0B	Move cursor to home position
US B	1F 42	Move cursor to bottom position
US \$ x y	1F 24 x y	➤ Move cursor to specified position x = 1 ~ 14h, for columns location. ➤ y = 1 ~ 2, for lines location.
CLR	0C	Clear display screen
US E n	1F 45 n	➤ Blink display screen n = 00h ~ FFh n = 0 for no blink
ESC @	1B 40	Initialize display
US , n	1F 2C n	➤ Specify comma n = a displayable character code
US . n	1F 2E n	➤ Specify period n = a displayable character code
US ; n	1F 3B n	➤ Specify semicolon (period + comma) n = a displayable character code
US :	1F 3A	Set starting/ending position of macro definition. Ex.: 1F 3A ... (macro string) ... 1F 3A
US ^ n m	1F 5E n m	➤ Execute and quit macro. It's an interval of n between the two words. It's an interval of m between the two strings. 00 ≤ (n, m) ≤ FFh ■ n = Word time ■ m = show string time
US @	1F 40	Execute self - test
US T h m	1F 54 h m	➤ Display time 0 ≤ h ≤ 17h, for hours setting. ➤ 0 ≤ m ≤ 3Bh, for minutes setting.
US U	1F 55	Display time continuously
US X n	1F 58 n	➤ Brightness adjustment n = 1 ~ 4

Command	Code (hex)	Function Description
ESC W <b>n s x1 y1 x2 y2</b>	1B 57 <b>n s x1 y1 x2 y2</b>	<ul style="list-style-type: none"> <li>➤ Set or cancel the window range</li> <li>➤ <b>n</b> = 1 ~ 4, for window number</li> <li>➤ <b>s</b> = 0: cancel</li> <li>➤ <b>s</b> = 1: set</li> <li>➤ <math>1 \leq \mathbf{x1} \leq \mathbf{x2} \leq 14\text{h}</math>, for columns</li> <li>➤ <math>1 \leq \mathbf{y1} \leq \mathbf{y2} \leq 2</math>, for lines .</li> </ul>
ESC R <b>n</b>	1B 52 <b>n</b>	<ul style="list-style-type: none"> <li>➤ Select international character set (20H~7Fh).</li> <li>➤ <b>n</b> = 00 ~ 1Fh. See note *1</li> </ul>
ESC t <b>n</b>	1B 74 <b>n</b>	<ul style="list-style-type: none"> <li>➤ Select character code table (80H~FFh).</li> <li>➤ <b>n</b> = 00 ~ 1Fh. See note *2</li> </ul>
ESC = <b>n</b>	1B 3D <b>n</b>	<ul style="list-style-type: none"> <li>➤ Select peripheral device, display or printer</li> <li><b>n</b> = '1': enable printer only</li> <li><b>n</b> = '2': enable display only</li> <li><b>n</b> = '3': enable both of printer and display</li> </ul>
ESC % <b>n</b>	1B 25 <b>n</b>	<ul style="list-style-type: none"> <li>➤ Set/Cancel User-Define Character Set</li> <li><b>n</b> = 0: Cancel User-Defined Character Set</li> <li><b>n</b> = 1: Set User-Define Character Set</li> </ul>
ESC & SOH <b>n m [b1~b5] * K</b>	1B 26 01 <b>n m [b1 ~ b5] * K</b>	<ul style="list-style-type: none"> <li>➤ Create User-define Character</li> <li>20h ≤ <b>n</b> ≤ <b>m</b> ≤ FFh</li> <li>[b1 ~ b5] Byte1~Byte5 Define Character (Ref. <b>User-Define Character Command-Set</b> 5x7 dot layout )</li> <li><b>K</b> = (m-n+1) → 1 ~ 5, Max. 5 character.</li> </ul>
ESC ?	1B 3F	Delete User-Define Character
ESC s SOH	1B 73 01	Store User-Define Character in EEPROM
ESC d SOH	1B 64 01	Load User-Define Character from EEPROM

Note: 1. Select international character set (20H~7Fh) for command “ESC R **n**”

<b>n</b>	international character set	<b>n</b>	international character set	<b>n</b>	international character set
<b>0h</b>	U.S.A.	<b>6h</b>	ITALY	<b>Ch</b>	RUSSIA
<b>1h</b>	FRANCE	<b>7h</b>	SPAIN	<b>Dh</b>	Not used
<b>2h</b>	GERMANY	<b>8h</b>	JAPAN	<b>Eh</b>	Not used
<b>3h</b>	U.K.	<b>9h</b>	NORWAY	<b>Fh</b>	Not used
<b>4h</b>	DENMARK I	<b>Ah</b>	DENMARK II		
<b>5h</b>	SWEDEN	<b>Bh</b>	SLAVONIC		

2. Select character code table (80H~FFh) for command “ESC t **n**”

<b>n</b>	character code table	<b>n</b>	character code table	<b>n</b>	character code table
<b>0h</b>	CP-437 (USA, Standard Europe)	<b>6h</b>	Slawie	<b>Ch</b>	Windows-1251 (Cyrillic)
<b>1h</b>	Katakana (for Japan)	<b>7h</b>	Russia	<b>Eh</b>	Windows-1255 (Hebrew)
<b>2h</b>	CP-850 (Multilingual)	<b>8h</b>	Greek	<b>Fh</b>	Windows-1257 (Baltic)
<b>3h</b>	CP-860 (Portuguese)	<b>9h</b>	CP-852 (Hungary)	<b>10h</b>	Windows-1252
<b>4h</b>	CP-863 (Canadian-French)	<b>Ah</b>	CP-862 (Hebrew)	<b>11h</b>	Windows-1253 (Greek)
<b>5h</b>	CP-865 (Nordic)	<b>Bh</b>	CP-866 (Cyrillic)	<b>13h</b>	CP-858 (Multilingual+ Euro Symbol)

## Character Set

### Character Codes 20H – 7FH

#### International Character Sets

Character Code Number													
Country	Hex	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
	Dec	35	36	64	91	92	93	94	96	123	124	125	126
U.S.A	#	\$	@	[	\	]	^	`	{		}	~	
France	#	\$	à	°	ç	§	^	`	é	ù	è	¨	
Germany	#	\$	§	Ä	Ö	Ü	^	`	ä	ö	ü	β	
U.K	£	\$	@	[	\	]	^	`	{		}	~	
Denmark I	#	\$	@	Æ	Ø	Å	^	`	æ	ø	å	~	
Sweden	#	¤	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü	
Italy	#	\$	@	°	\	é	^	ù	à	ò	è	ì	
Spain	Pt	\$	@	¡	Ñ	¿	^	`	¨	ñ	}	~	
Japan	#	\$	@	[	¥	]	^	`	{		}	~	
Norway	#	¤	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü	
Denmark II	#	\$	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü	
Slavonic	#	\$	@	[	\	]	^	`	{		}	~	
Russia	#	\$	@	[	\	]	^	`	{		}	~	

#### USA, Standard Character Sets

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
20h		!	“	#	\$	%	&	'	(	)	*	+	,	-	.	/
30h	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40h	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50h	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
60h	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70h	p	q	r	s	t	u	v	w	x	y	Z	{		}	~	

**Character Codes 80H – FFH**  
**CP-437 (USA, Standard Europe)**

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90h	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	ø	£	¥	Pt	f
A0h	á	í	ó	ú	ñ	Ñ	ª	º	¿	¬	½	¼	¡	«	»	
B0h	⋯	⋮	⋭		¡	‡	‡	¶	¶	‡	‡	¶	¶	¶	¶	¶
C0h	ℒ	⊥	⊤	†	–	†	‡	‡	ℒ	ℒ	⊥	⊤	‡	=	‡	⊥
D0h	⊥	⊤	¶	ℒ	ℒ	ℒ	¶	‡	‡	¶	¶	■	■	■	■	■
E0h	α	β	Γ	π	Σ	σ	μ	τ	Φ	θ	Ω	δ	∞	∅	ε	∩
F0h	≡	±	≥	≤			÷	≈	°	•	·	√	ⁿ	²	■	

**CP-850 (Multilingual)**

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90h	É	æ	Æ	ô	ö	ò	û	ù	ÿ	ö	Ü	ø	£	Ø	×	f
A0h	á	í	ó	ú	ñ	Ñ	ª	º	¿	®	¬	½	¼	¡	«	»
B0h	⋯	⋮	⋭		¡	Á	Â	Ã	©	‡	‡	¶	¶	ø	¥	¶
C0h	ℒ	⊥	⊤	†	–	†	ã	Ã	ℒ	ℒ	⊥	⊤	‡	=	‡	α
D0h	ø	Ð	Ê	Ë	È	Í	Î	Ï	¶	¶	■	■	¡	ì	■	
E0h	ó	β	ô	ò	õ	Õ	μ	þ	þ	Ú	Û	Ù	ý	Ý	–	´
F0h	–	±	=	¾	¶	§	÷	·	°	¨	·	1	3	2	■	

**CP-858 (Multilingual + Euro Symbol)**

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90h	É	æ	Æ	ô	ö	ò	û	ù	ÿ	ö	Ü	ø	£	Ø	×	f
A0h	á	í	ó	ú	ñ	Ñ	ª	º	¿	®	¬	½	¼	¡	«	»
B0h	⋯	⋮	⋭		¡	Á	Â	Ã	©	‡	‡	¶	¶	ø	¥	¶
C0h	ℒ	⊥	⊤	†	–	†	ã	Ã	ℒ	ℒ	⊥	⊤	‡	=	‡	α
D0h	ø	Ð	Ê	Ë	È	€	Í	Î	Ï	¶	¶	■	■	¡	ì	■
E0h	ó	β	ô	ò	õ	Õ	μ	þ	þ	Ú	Û	Ù	ý	Ý	–	´
F0h	–	±	=	¾	¶	§	÷	·	°	¨	·	1	3	2	■	

## Katakana for Japan

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	α	β	γ	△	ε	η	θ	λ	μ	π	ρ	σ	τ	Φ	Ω	Σ
90h	£	§	IE	IR	∫	∞	Ā	<sup>-1</sup>	<sup>2</sup>	<sup>3</sup>	x	½	1/	√	±	■
A0h		◦	「	」	、	・	ヲ	フ	イ	ウ	エ	オ	ヤ	ユ	ヨ	ツ
B0h	一	ア	イ	ウ	エ	オ	カ	キ	ク	ケ	コ	サ	シ	ス	セ	ソ
C0h	タ	チ	ツ	テ	ト	ナ	ニ	ヌ	ネ	ノ	ハ	ヒ	フ	ヘ	ホ	マ
D0h	ミ	ム	メ	モ	ヤ	ユ	ヨ	ラ	リ	ル	レ	ロ	ワ	ン	"	°
E0h	↑	↓	←	→	↶	↷	↸	↹	↺	↻	”	“	«	»	∴	∴
F0h	≤	≥	≠	≡	∥		⊥	∞	α	~	~	≡	〒	⊕	⊕	⊖

## Slawie

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	Ç	ü	é	â	ä	û	ć	ç	ł	ë	õ	õ	î	ż	ä	ć
90h	é	ł	í	ô	ö	ł'	ĩ	ś	ś	Ö	Ü	ł'	ł'	ł	x	č
A0h	á	í	ó	ú	ą	ą	ż	ż	ę	ę		ż	č	ş	«	»
B0h	■	■	■		†	á	â	ě	ş					ł	ł	
C0h					—	†	ă	ă						=		α
D0h	đ	đ	d'	ë	d'	ň	í	î	ě			■	■	ł	û	■
E0h	ó	β	ô	ń	ń	ň	š	š	ř	ú	ř	ũ	ý	ý	ł	'
F0h	—	~	.	˘	˘	§	÷	˘	°	˘	˘	ũ	ř	ř	■	

## Russia

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П
90h	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	Э	Ю	Я
A0h	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п
B0h																
C0h																
D0h																
E0h	р	с	т	у	ф	х	ц	ч	ш	щ	ъ	ы	ь	э	ю	я
F0h	ø	ƒ	Ɔ	Ң	θ	Ƴ	Υ	h	ø	ƒ	Ɔ	Ң	θ	Ƴ	Υ	

### CP-860 (Portuguese)

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	Ç	ü	é	â	ã	à	Á	ç	ê	Ê	è	í	Ô	ì	Ã	Â
90h	É	À	È	ô	õ	ò	Ú	ù	ì	Õ	Ü	ç	£	Ù	Pt	Ó
A0h	á	í	ó	ú	ñ	Ñ	a	_o	¿	®	¬	½	¼	¡	«	»
B0h	☼	☼	☼		†	‡	‡	π	ƒ	‡		¶	¶	¶	¶	¶
C0h	L	⊥	⊥	†	—	†	†	†	ℒ	℞	⊥	⊥	⊥	=	‡	±
D0h	⊥	⊥	π	ℒ	ℒ	℞	π	‡	‡	∟	L	■	■	■	■	■
E0h	α	β	Γ	π	Σ	σ	μ	τ	Φ	θ	Ω	δ	∞	∅	ε	∩
F0h	≡	±	≥	≤		J	÷	≈	°	•	·	√	n	²	■	

### Greek

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	A	B	Γ	Δ	E	Z	H	Θ	I	K	Λ	M	N	Ξ	O	Π
90h	P	Σ	T	Υ	Φ	Χ	Ψ	Ω	α	β	γ	δ	ε	ζ	η	θ
A0h	ι	κ	λ	μ	ν	ξ	ο	π	ρ	σ	ς	τ	υ	φ	χ	ψ
B0h																
C0h																
D0h																
E0h	ω															
F0h										£				-		

### CP-852 (Hungary)

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	Ç	ű	é	â	ä	ű	ć	ç	ł	ë	Ő	ő	î	Ž	Ä	Ć
90h	É	Í	í	ô	ö	Ĺ	ı	Ś	ś	Ö	Ü	Ť	ť	Ł	x	Č
A0h	á	í	ó	ú	Ą	ą	Ž	ž	Ę	ę	¬	ż	Č	ş	«	»
B0h	☼	☼	☼		†	Á	Â	Ě	Ş	‡		¶	¶	z	z	γ
C0h	L	⊥	⊥	†	—	†	Ä	ä	ℒ	℞	⊥	⊥	⊥	=	‡	α
D0h	đ	Đ	Ď	Ě	ď	Ň	í	î	ě	∟	ı	■	■	Ť	Ů	■
E0h	Ó	β	Ô	Ň	ň	ň	Š	š	Ř	Ú	ř	Ů	ý	Ý	ț	'
F0h	-	~	.	˘	˘	§	÷	∩	°	¨	·	ű	Ř	ř	■	

### CP-862 (Hebrew)

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	א	ב	ג	ד	ה	ו	ז	ח	ט	י	ך	כ	ל	ם	נ	ן
90h	ג	ו	ע	ק	פ	צ	ק	ר	ש	ת	פ	£	¥	Pts	f	
A0h	á	í	ó	ú	ñ	Ñ	ª	º	¿	¬	½	¼	¡	«	»	
B0h	▒	▒	▒		┆	≡	≡	≡	≡	≡	≡	≡	≡	≡	≡	≡
C0h	L	⊥	⊥	┆	—	┆	┆	┆	ℒ	℞	≡	≡	≡	=	≡	≡
D0h	≡	≡	≡	≡	≡	≡	≡	≡	≡	⌋	⌈	■	■	▮	▮	■
E0h	α	β	Γ	π	Σ	σ	μ	τ	Φ	Θ	Ω	δ	∞	φ	ε	∩
F0h	≡	±	≥	≤		J	÷	≈	°	•	•	√	n	²	■	

### CP-863 (Canadian- French)

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	Ç	ü	é	â	Â	à	¶	ç	ê	ë	è	ï	î	=	Ä	§
90h	É	È	Ê	ô	Ë	Ï	û	ù	œ	Ô	Ü	ø	£	Ù	Û	f
A0h		í	‘	ó	ú	¨	˘	˘	î	¬	¬	½	¼	¾	«	»
B0h	▒	▒	▒		┆	≡	≡	≡	≡	≡	≡	≡	≡	≡	≡	≡
C0h	L	⊥	⊥	┆	—	┆	┆	┆	ℒ	℞	≡	≡	≡	=	≡	≡
D0h	≡	≡	≡	≡	≡	≡	≡	≡	≡	⌋	⌈	■	■	▮	▮	■
E0h	α	β	Γ	π	Σ	σ	μ	τ	Φ	Θ	Ω	δ	∞	φ	ε	∩
F0h	≡	±	≥	≤		J	÷	≈	°	•	•	√	n	²	■	

### CP-865 (Nordic)

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90h	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	ø	£	Ø	Pt	f
A0h	á	í	ó	ú	ñ	Ñ	ª	º	¿	®	¬	½	¼	¡	«	»
B0h	▒	▒	▒		┆	≡	≡	≡	≡	≡	≡	≡	≡	≡	≡	≡
C0h	L	⊥	⊥	┆	—	┆	┆	┆	ℒ	℞	≡	≡	≡	=	≡	≡
D0h	≡	≡	≡	≡	≡	≡	≡	≡	≡	⌋	⌈	■	■	▮	▮	■
E0h	α	β	Γ	π	Σ	σ	μ	τ	Φ	θ	Ω	δ	∞	ø	ε	∩
F0h	≡	±	≥	≤		J	÷	≈	°	•	•	√	n	²	■	



### CP-866 (Cyrillic)

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П
90h	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	Э	Ю	Я
A0h	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п
B0h	⌘	⌘	⌘		†	‡	‡	‡	‡	‡	‡	‡	‡	‡	‡	‡
C0h	⌘	⌘	⌘	†	‡	‡	‡	‡	‡	‡	‡	‡	‡	‡	‡	‡
D0h	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	■	■	■	■	■
E0h	р	с	т	у	ф	х	ц	ч	ш	щ	ъ	ы	ь	э	ю	я
F0h	Ё	ё	Є	е	ї	і	Ў	ў	°	·	·	√	№	α	■	

### Windows-1250

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	€		,	„	„	...	†	‡		‰	Š	‹	Ś	Ť	Ž	Ž
90h		‘	’	“	”	•	–	—		™	š	›	ś	ť	ž	ž
A0h		˘	˘	ł	α	Α		§	¨	©	Ś	«	¬		®	Ž
B0h	°	±	˘	ł	´	μ	¶	·	,	ą	ś	»	ł	˘	ł	ž
C0h	Ř	Á	Â	Ă	Ä	É	Ć	Ç	Č	É	Ě	Ë	Ě	Í	Î	Ď
D0h	Đ	Ń	Ň	Ó	Ô	Õ	Ö	×	Ř	Ú	Ú	Ů	Ü	Ý	Ï	ß
E0h	ř	á	â	ă	ä	é	ć	ç	č	é	ě	ë	ě	í	î	ď
F0h	đ	ń	ň	ó	ô	õ	ö	÷	ř	ú	ú	ů	ü	ý	ı	·

### Windows-1251 (Cyrillic)

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	Ъ	Ѓ	,	ѓ	„	...	†	‡	€	‰	Љ	‹	Њ	Ќ	Ѕ	Ї
90h	ђ	‘	’	“	”	•	–	—		™	љ	›	њ	ќ	ѕ	ї
A0h		Ў	ў	Ј	α	Ѓ		§	Ё	©	Є	«	¬		®	Ї
B0h	°	±	І	і	ѓ	μ	¶	·	ё	№	е	»	ј	ѕ	ѕ	ї
C0h	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П
D0h	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	Э	Ю	Я
E0h	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п
F0h	р	с	т	у	ф	х	ц	ч	ш	щ	ъ	ы	ь	э	ю	я

### Windows-1252

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	€		,	f	„	...	†	‡	^	‰	Š	‹	Œ		Ž	
90h		‘	’	“	”	•	–	—	~	™	š	›	œ		ž	ÿ
A0h		ı	ø	£	¤	¥		§	¨	©	ª	«	¬		®	¯
B0h	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾	¿
C0h	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D0h	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
E0h	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F0h	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ	ÿ

### Windows-1253 (Greek)

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	€		,	f	„	...	†	‡		‰		‹				
90h		‘	’	“	”	•	–	—		™		›				
A0h		ˆ	À	£	¤	¥		§	¨	©		«	¬	–	®	¯
B0h		±	²	³	´	µ	¶	·	ˆ	Η	Ι	»	Ο	½	Υ	Ω
C0h	ı	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	Μ	Ν	Ξ	Ο
D0h	Π	Ρ		Σ	Τ	Υ	Φ	Χ	Ψ	Ω	İ	ÿ	ά	έ	ή	ί
E0h	ϖ	α	β	γ	δ	ε	ζ	η	θ	ι	κ	λ	μ	ν	ξ	ο
F0h	π	ρ	ς	σ	τ	υ	φ	χ	ψ	ω	ı	ÿ	ό	ύ	ώ	

### Windows-1255 (Hebrew)

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	€		,	f	„	...	†	‡	^	‰		‹				
90h		‘	’	“	”	•	–	—	~	™		›				
A0h		ı	ø	£	¤	¥		§	¨	©	×	«	¬	–	®	¯
B0h	°	±	²	³	´	µ	¶	·	¸	¹	÷	»	¼	½	¾	¿
C0h	:	”	”	”	”	”	”	”	”	”	”	”	”	”	”	”
D0h		·	·	:			”	’	”	,	:	;	.	!	?	
E0h	א	ב	ג	ד	ה	ו	ז	ח	ט	י	ך	כ	ל	מ	נ	ן
F0h	נ	ס	ע	ף	פ	ץ	צ	ק	ר	ש	ת					

## Windows-1257 (Baltic)

	00h	01h	02h	03h	04h	05h	06h	07h	08h	09h	0Ah	0Bh	0Ch	0Dh	0Eh	0Fh
80h	€		,		”	...	†	‡		‰		<		“	”	„
90h		‘	’	“	”	•	–	—		™		>		–	ˆ	
A0h			ø	£	¤			§	Ø	©	℞	«	¬	–	®	Æ
B0h	°	±	²	³	´	μ	¶	·	ø	¹	ı	»	¼	½	¾	æ
C0h	Ą	Į	Ā	Ć	Ä	Å	Ę	Ē	Č	É	Ž	Ė	Ģ	Ķ	Ī	Ļ
D0h	Š	Ń	Ņ	Ó	Ō	Õ	Ö	×	Ų	Ł	Ś	Ū	Ü	Ż	Ž	ß
E0h	ą	į	ā	ć	ä	å	ę	ē	č	é	ž	ė	ģ	ķ	ī	ļ
F0h	š	ń	ņ	ó	ō	õ	ö	÷	ų	ł	ś	ū	ü	ż	ž	·

## Command Details

### A.1. Overwrite mode

In this mode, the cursor will move towards the right and begin from the upper left position. When the cursor has reached the end of the upper line, the cursor will move down to the bottom left position to continue. When the cursor has reached the end of the bottom line, it will move to up the upper left position and overwrite the previous characters.

### A.2. Vertical scroll mode

In this mode, the cursor will move towards the right. The cursor will begin from the upper left position until it has reached the end of the upper line. The cursor will then move down to the bottom left position to continue until it has reached the end of the bottom line.

### A.3. Horizontal scroll mode

In this mode, the extent of the cursor activity is bound by a predefined range, limited to the upper line. (Please refer to Set or cancel window command), where the default window is the whole upper line. The cursor will begin from the left-end of the range and move rightward until it reached the end of the range, to continue, the characters that comes thereafter will start pushing the previous characters leftward from the right-end, scrolling the characters to the left.

### A.4. Set the string display mode and write string to display

Set the string display mode, write to upper or lower line  $d_1 d_2 d_3 \dots d_n$   $\{1 \leq n \leq 20\}$ . 'A' stands for the upper line, 'B' stands for the lower line. The string display mode will be cancelled and the display will return to the previous mode after receiving CLR or CAN.

### A.5. Upper line message continuous scroll

The message (previously defined) will scroll continuously in the horizontal direction until a new command is received.

### A.6. Move cursor left

When the current cursor is at the left-end position, this command operates differently depending on the display mode.

- **Overwrite mode:** When the cursor reached the left-end of the lower line, it will continue to the right-end of the upper line, overwrite previous characters. When it reached the left end of the upper line, it will continue to the right-end of the lower line.
- **Vertical scroll mode:** When the cursor reached the left-end of the lower line, the lower line will scroll up and replace the previous upper line, the lower line will be cleared and the cursor will continue to the right end of the lower line.
- **Horizontal scroll mode:** The cursor will remain stationary.

### A.7. Move cursor right

Move the cursor to the right. When the cursor has reached the right-end, this command operates differently depending on the display mode.

- **Overwrite mode:** When the cursor has reached the right-end of the lower line, it will continue to the left-end of the upper line and overwrite previous characters. When it has reached the right-end of the upper line, it will continue to the right-end of the lower line.
- **Vertical scroll mode:** When the cursor has reached the right-end of the lower line, the lower line will scroll up to replace the upper line, the lower line is cleared and ready to continue characters thereafter.
- **Horizontal scroll mode:** The cursor will remain stationary.

### **A.8. Move cursor up**

Move the cursor up one line. When the cursor is on the upper line, this command operates differently depending on the display mode.

- **Overwrite mode:** The cursor is moved to the same column the lower line.
- **Vertical scroll mode:** The characters displayed on the upper line is scrolled to the lower line, and the upper line is cleared. The cursor will remain at the same position.
- **Horizontal scroll mode:** The cursor will remain stationary.

### **A.9. Move cursor down**

Move the cursor down one line. When the cursor is on the lower line, this command operates differently depending on the display mode.

- **Overwrite mode:** The cursor is moved to the same column on the upper line.
- **Vertical scroll mode:** The characters displayed on the lower line are scrolled to the upper line, and the lower line is cleared. The cursor will remain at the same position.
- **Horizontal scroll mode:** The cursor will remain stationary.

### **A.10. Move cursor to home position**

The cursor will move to the left-end position of the upper line.

### **A.11. Move cursor to left-most position**

The cursor will be moved to the left-end position of the current line.

### **A.12. Move cursor to right-most position**

The cursor will be moved to the right-end position of the current line.

### **A.13. Move cursor to bottom position**

The cursor will be moved to the right-end position on the lower line.

### **A.14. Move cursor to specified position**

The cursor will be moved to column x on line y.

### **A.15. Initialize display**

The data in the input buffer will be cleared and reset from default.

### **A.16. Reset the window**

Reset the window on the display.

When s=0, the window is cancelled (values: x1, x2, and y are not required.)

When s=1, the window will be reset (values: x1, x2, and y are required.)

The x1 and x2 set the position of the left column and right column, respectively, of the window.

The y sets the upper line or the lower line of the window.

This function is valid within the horizontal mode.

### **A.17. Clear display screen and clear string mode**

All the display characters will be cleared, and the string mode will be cancelled.

### **A.18. Clear current line and cancel string mode**

The current line is cleared, and the string mode is cancelled.

### **A.19. Brightness adjustment**

Adjust the brightness of the vacuum fluorescent display.

When n=3, brightness=70%

When n=4, brightness=100%

## A.20. Set cursor ON or OFF

When n=0, cursor is OFF

When n=1, cursor is ON

### Control Code Set

HEX	CODE	HEX	CODE
00H	NULL	10H	DLE
01H	SOH, MD1	11H	DC1
02H	STX, MD2	12H	DC2
03H	ETX, MD3	13H	DC3
04H	EOT, MD4	14H	DC4
05H	ENQ, MD5	15H	NAK
06H	ACK, MD6	16H	SYN
07H	BEL, MD7	17H	ETB
08H	BS, MD8	18H	CAN
09H	HT	19H	EM
0AH	LF	1AH	SUB
0BH	VT, HOM	1BH	ESC
0CH	FF, CLR	1CH	FS
0DH	CR	1DH	GS
0EH	SO, SLE1	1EH	RS, SF1
0FH	SI, SLE2	1FH	US, SF2